

New SolidTech Wall Display



Graphics, 2 wing platform modules, 64 skus - 18" x 46" samples







Dimensions 104"w x 24"d x 64"h







SPK0010358

MOHAWK

SOLIDTECHTM

Aligned Display Planogram

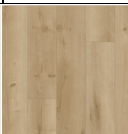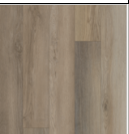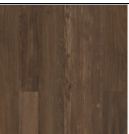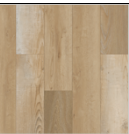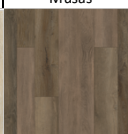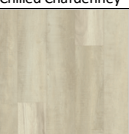LEFT MODULE													
Wing 1		Wing 2		Wing 3		CENTER GRAPHIC	Wing 4		Wing 5		Wing 6		
Back	Front	Back	Front	Back	Front		Front	Back	Front	Back	Front	Back	
Perfect Haven Affogato	Perfect Haven Amulet	Perfect Haven Marigold	Perfect Haven Kombucha	Perfect Haven Secret Garden	Perfect Haven Nomadic Desert		Perfect Haven Abyss	Perfect Haven Canella	Perfect Haven Death By Chocolate	Perfect Haven Kyoto	Perfect Haven Poetry Grey	Perfect Haven Final Straw	
													
RES21_310	RES21_240	RES21_155	RES21_356						RES21_495	RES21_912	RES21_920	RES21_930	
Perfect Haven Jasmine Rice	Perfect Haven Musas	Perfect Haven Amber	Perfect Haven Licorice						Perfect Haven Mandorla	Perfect Haven Aroma Moca	Perfect Haven Cola Nut	Perfect Haven Chilled Chardenney	
													
RES21_321	ES21_450	RES21_130	RES21_962	RES21_404	RES21_405	RES21_319	RES21_320	RES21_488	RES21_489	RES21_485	RES21_902		

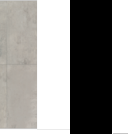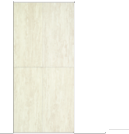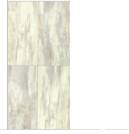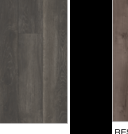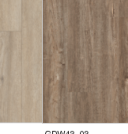
RIGHT MODULE																								
Wing 1		Wing 2		Wing 3		Wing 4		Wing 5		Wing 6		CENTER GRAPHIC	Wing 7		Wing 8		Wing 9		Wing 10		Wing 11		Wing 12	
Back	Front	Back	Front	Back	Front	Back	Front	Back	Front	Back	Front		Front	Back	Front	Back	Front	Back	Front	Back	Front	Back	Front	Back
True Vision Weathered Grey	True Vision Natural Pecan	True Vision Sienna	True Vision Sandstorm	Duxbury Bismuth	Duxbury Aster	Duxbury Ammonite	Duxbury Duke Grey	Duxbury Milkshake	Vershire Silhouette	Vershire Silver Shadows	Infused Beauty Pebble Stone		Infused Beauty Arctic White	Infused Beauty Cashmere Pearl	Infused Beauty Coral Reef	Revella Acier	Revella Clove	Revella Cinnabar	Revella Sandstorm	Galvyn Pearl Platinum	Galvyn Mizzle	Galvyn Hearthstone	Galvyn Lava Java	Galvyn Brown Sugar
																								
RVB01_300_SWITCH	RVB01_840_SWITCH	RVB01_270_SWITCH	RVB01_310_SWITCH	GDW44_453	GDW44_350	GDW44_592	GDW44_580	GDW44_915	VAR45_21	VAR45_24	RVB02_925_SWITCH		RVB02_120_SWITCH	RVB02_905_SWITCH	RVB02_250_SWITCH	RVL44_982	RVL44_490	RVL44_432	RVL44_13	GDW43_06	GDW43_912	GDW43_08	GDW43_483	GDW43_12
True Vision Platinum Grey	True Vision Caramel Oak	True Vision Hayloft	True Vision Fossil Grey	Duxbury Tallow	Duxbury Wanaka	Duxbury Birista	Duxbury Calluna	Duxbury Phantom Mist	Vershire Shadow Wood	Infused Beauty Crema	Perfect Haven Brinjal		Perfect Haven Castagna	Infused Beauty Russet	Revella Hazy Daze	Revella Chinchilly	Revella Anise	Revella Teatime	Revella Gunmetal	Galvyn Silver Screen	Galvyn Souffle	Galvyn Castle Rock	Galvyn Portabello	Galvyn Boardwalk
																								
RES21_932	RVB01_150_SWITCH	RVB01_800_SWITCH	RVB01_300_SWITCH	RVB01_300_SWITCH	RVB01_300_SWITCH	RVB01_300_SWITCH	RVB01_300_SWITCH	RVB01_300_SWITCH	RVB01_300_SWITCH	RVB01_300_SWITCH	RES21_999	RES21_932	RVB01_300_SWITCH	RVL44_905	RVL44_345	RVL44_510	RVL44_19	RVL44_14	GDW43_10	GDW43_342	GDW43_03	GDW43_906	GDW43_02	

MOHAWK SOLIDTECH DISPLAY

ASSEMBLY INSTRUCTIONS

2019

105" W x 24" D x 64" H

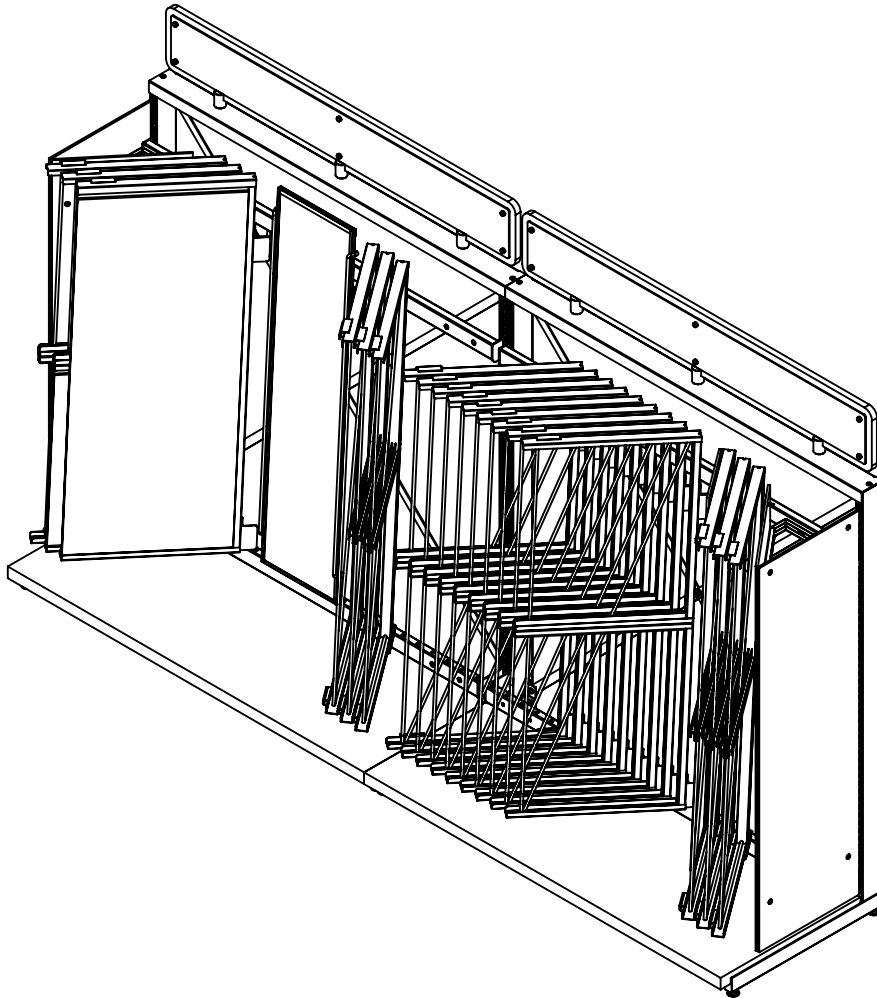


RECOMMENDED TOOLS



CORDLESS
POWER DRILL



PHILLIPS HEAD
SCREWDRIVER

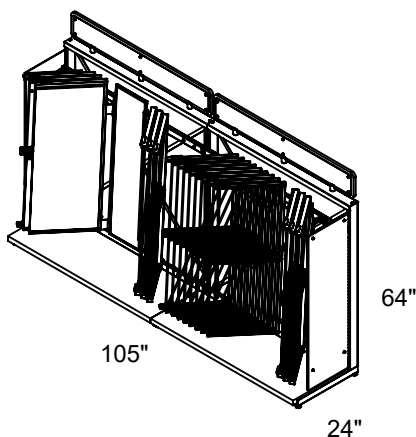

Display Footprint: 105"W x 24"D x 64"H



**HAND TIGHTEN ALL FASTENERS
DURING ASSEMBLY.**

**WHEN ASSEMBLY IS COMPLETED
USE APPROPRIATE TOOLS TO SECURE
ALL FASTENERS PERMANENTLY**

SAFETY GUIDELINES

**Failure to follow the assembly instructions
could result in damage or injury.**

**Install in a level and stable location. If not on a
level surface please level before installation.**

**Assemble display in the area it will occupy.
Never attempt to move display after loading.**

**When using any power tools, always use
eye protection.**



**Do not work on this display with product in it.
Unload display before relocating unit.
Failure to do this may result in damage or injury.**




**For proper installation and safety follow all steps
in sequential order.**

Two people required to set up this display.




For Customer assistance: POPServices@artguildinc.com or
call 877.233.7962 to speak with a customer representative.


PARTS

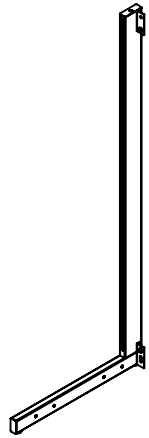


LEFT LEG
X2

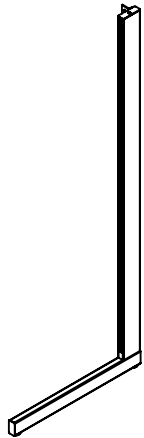


RIGHT LEG
X2

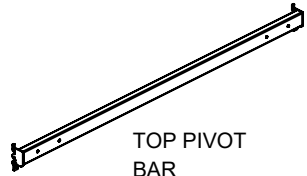


TOP PIVOT
BAR
X2

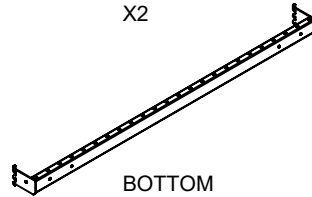


BOTTOM
PIVOT BAR
X2

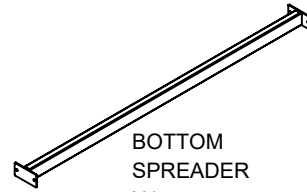


BOTTOM
SPREADER
X4

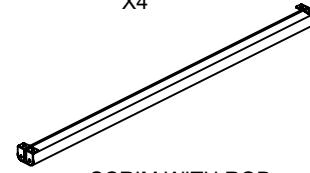


SCRIM WITH ROD
& BRACKETS
X2

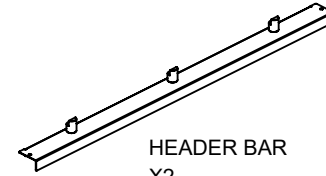


HEADER BAR
X2

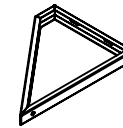

TOP GRAPHIC
BRACKET
X2




BOTTOM GRAPHIC
BRACKET
X2




GRAPHIC
FRAME
X1




MINI WING
HINGE
X1

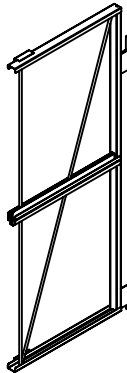

PAGE FRAME
LEFT
X16

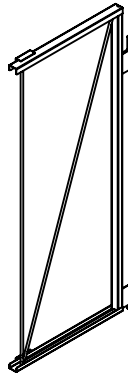

TALL SAMPLE
PAGE FRAME
X2



LEFT STOP
X2




RIGHT STOP
X2



UPRIGHT
EXTENSION
X2



HEADER
UPRIGHT
X2




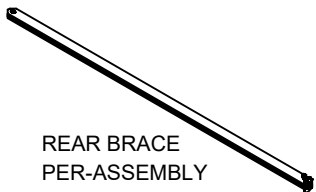


REAR BRACE
PER-ASSEMBLY
X2



For Customer assistance: POPServices@artguildinc.com or
call 877.233.7962 to speak with a customer representative.


PARTS

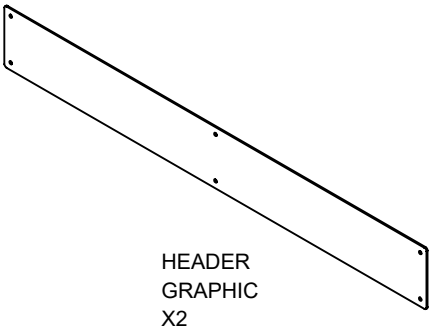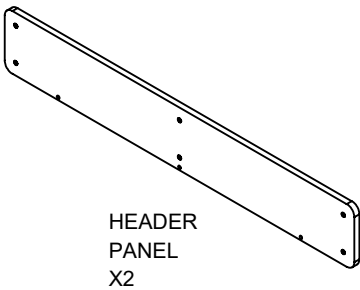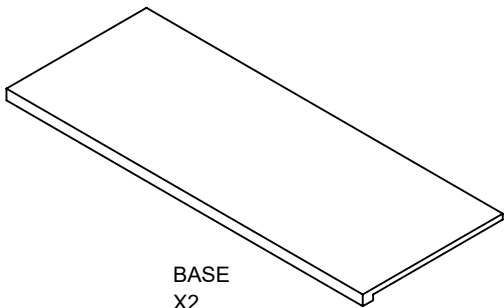


For Customer assistance: POPServices@artguildinc.com or call 877.233.7962 to speak with a customer representative.

HARDWARE


CARTON #1:

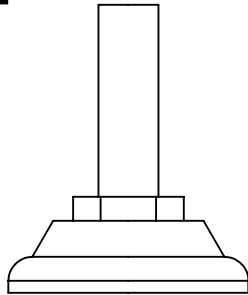


Leveler
X4



20mm Deco Bolt
X34




23mm Deco Bolt
X3



PUCK
X6




THREADED STUD
X6

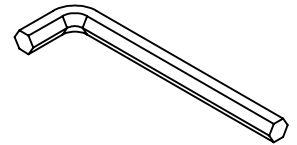


Hex Key
X1

CARTON #3/#4:



NYLON RETAINING
WASHER
X6

CARTON #5:





Screw
Post
X4




For Customer assistance: POPServices@artguildinc.com or
call 877.233.7962 to speak with a customer representative.

Step 1




A

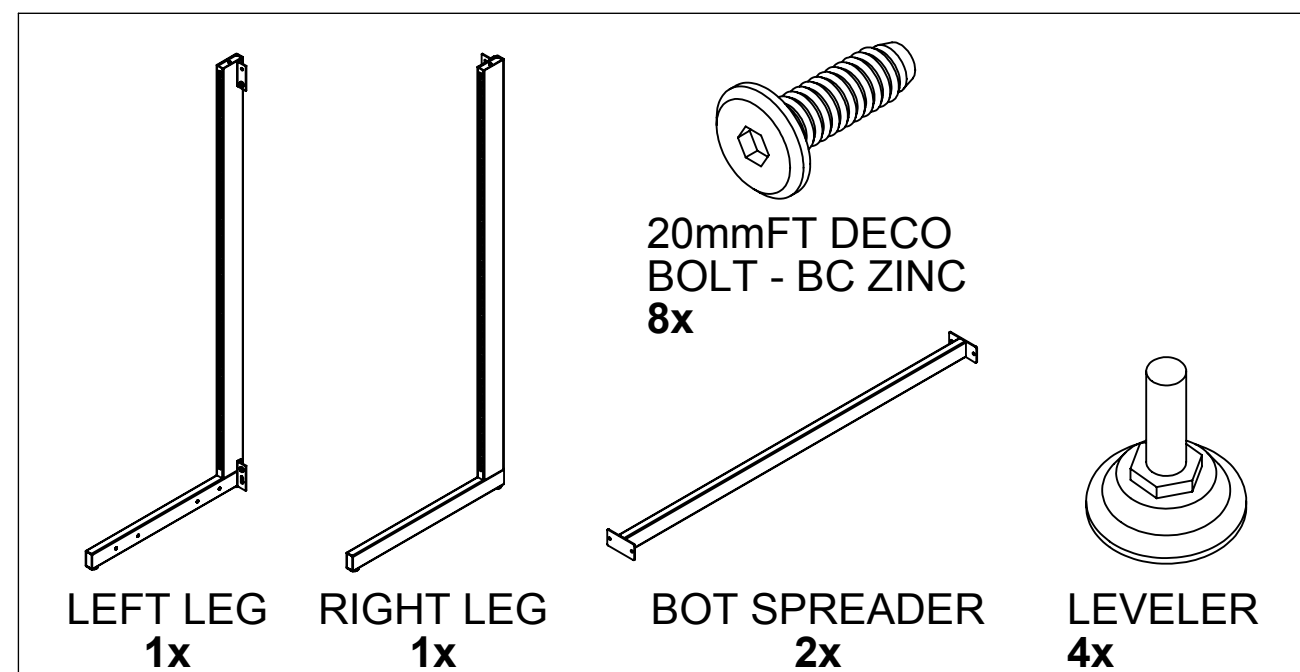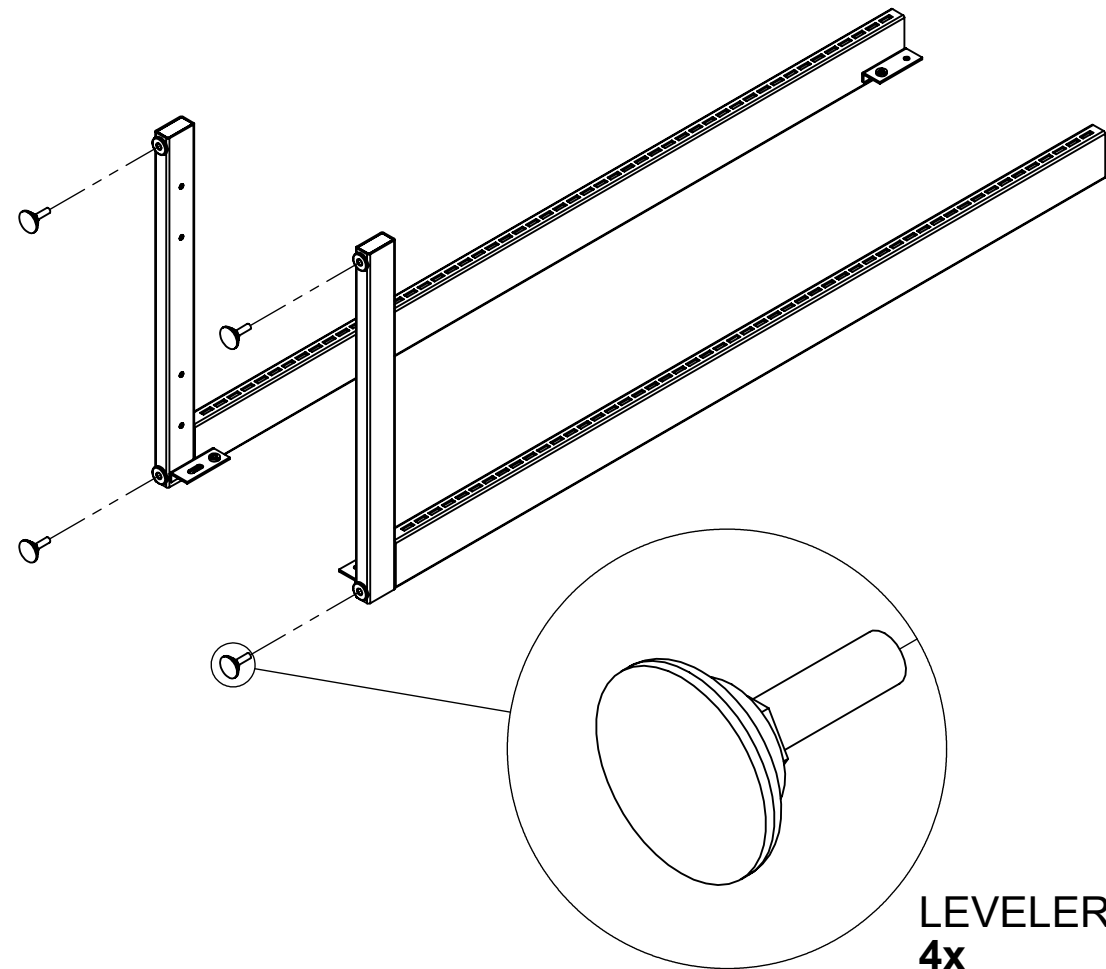



B

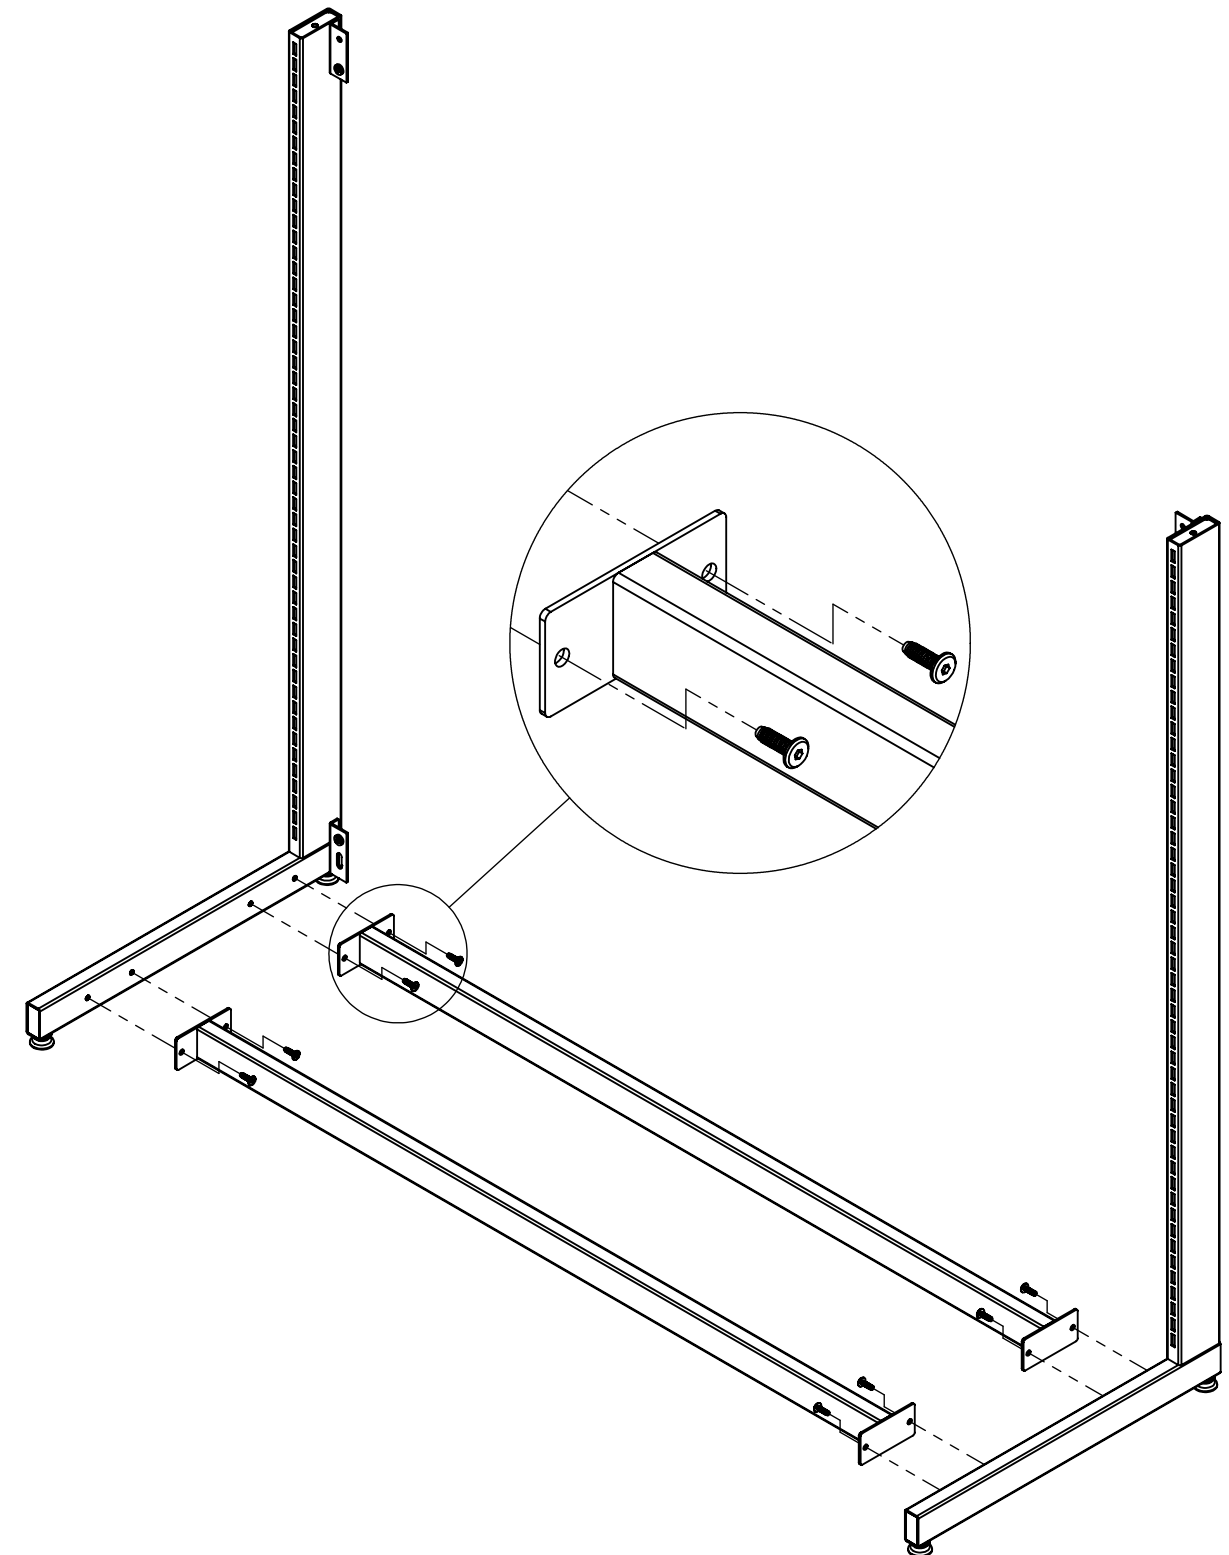


Step 2

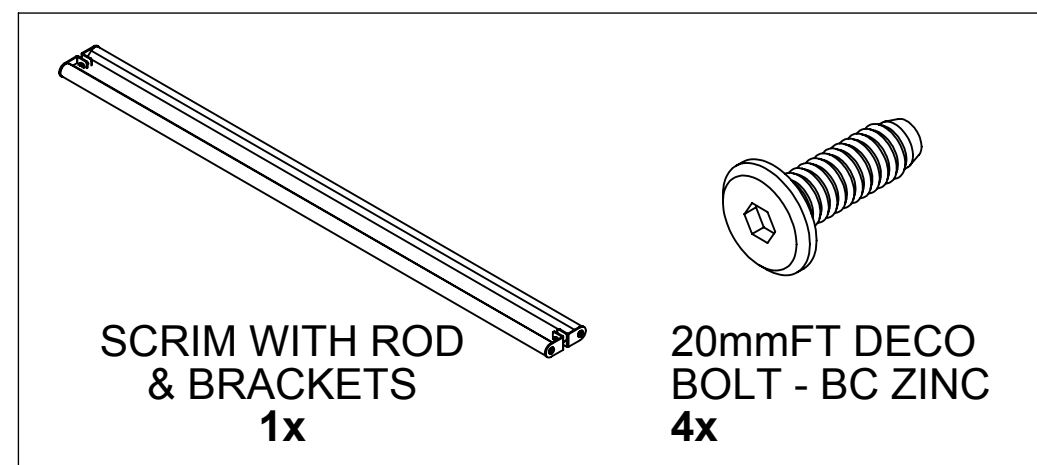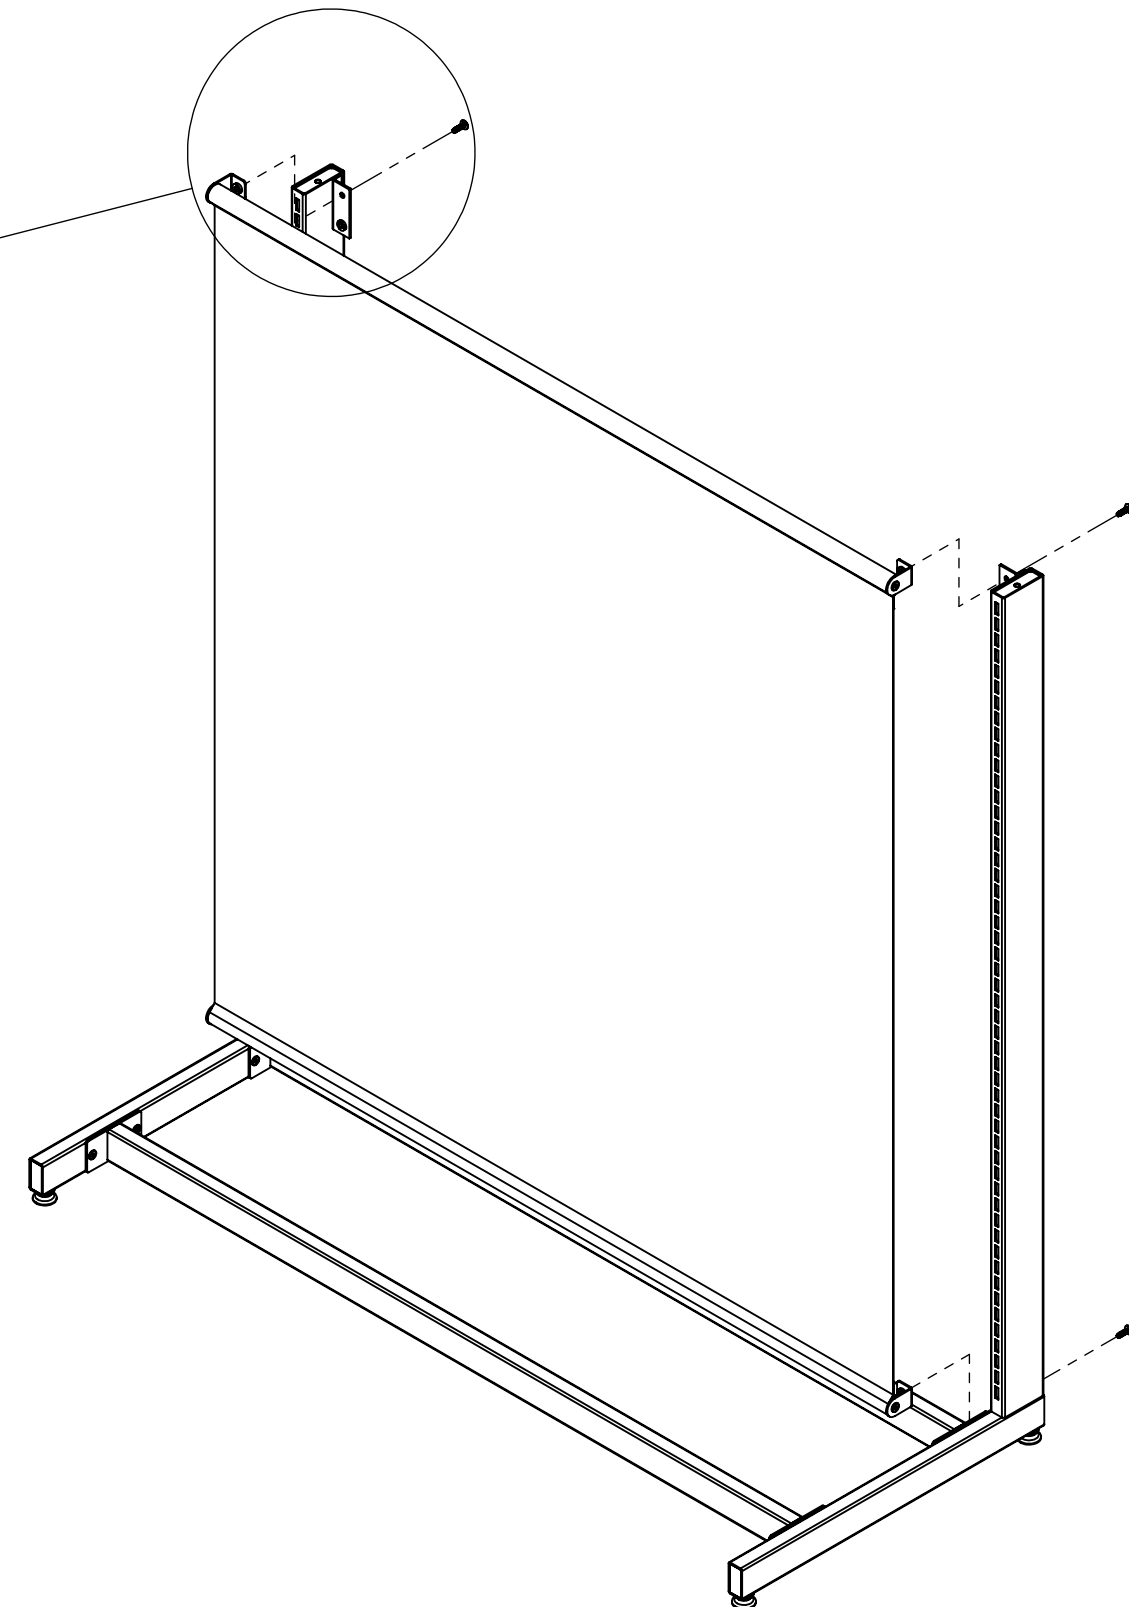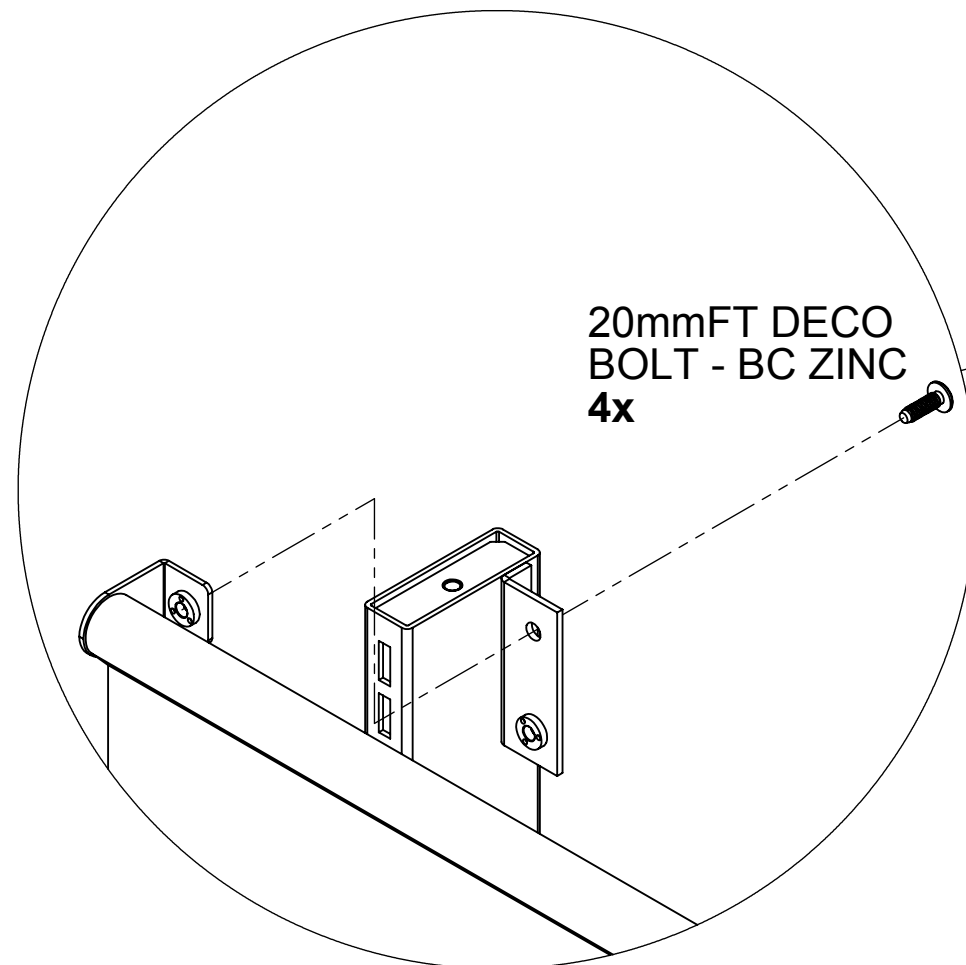


Step 3

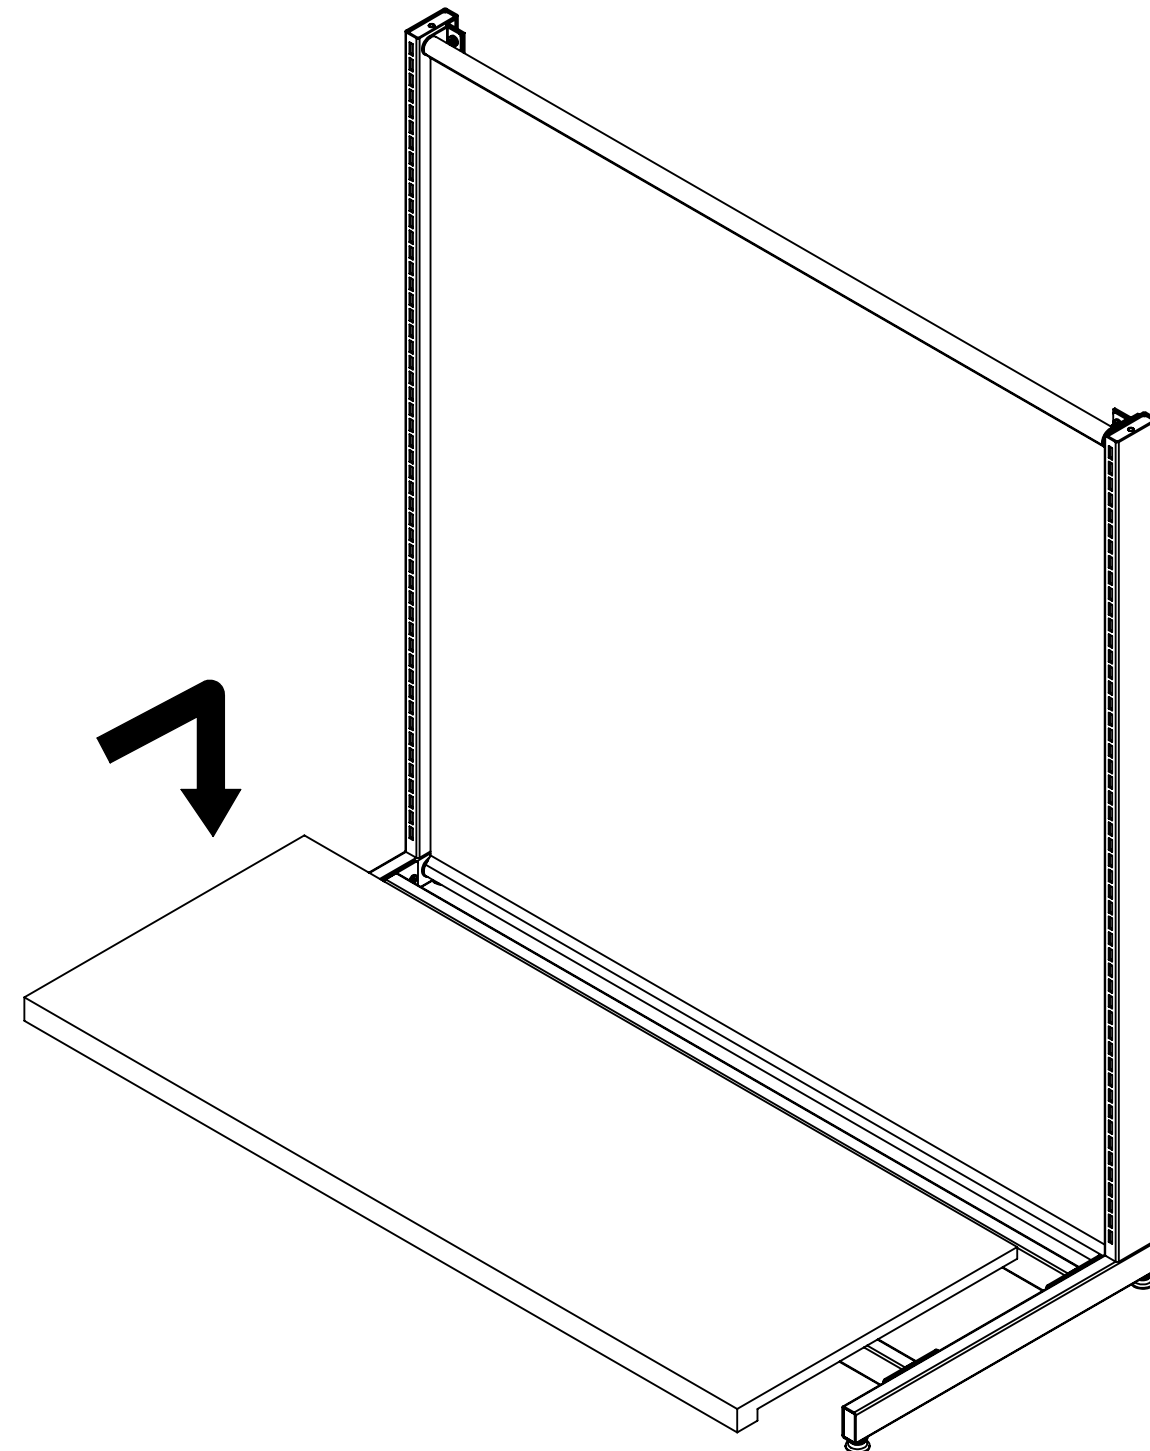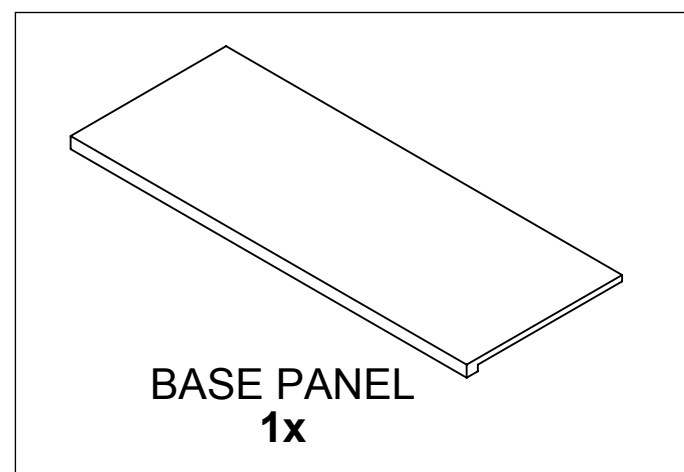

Step 4

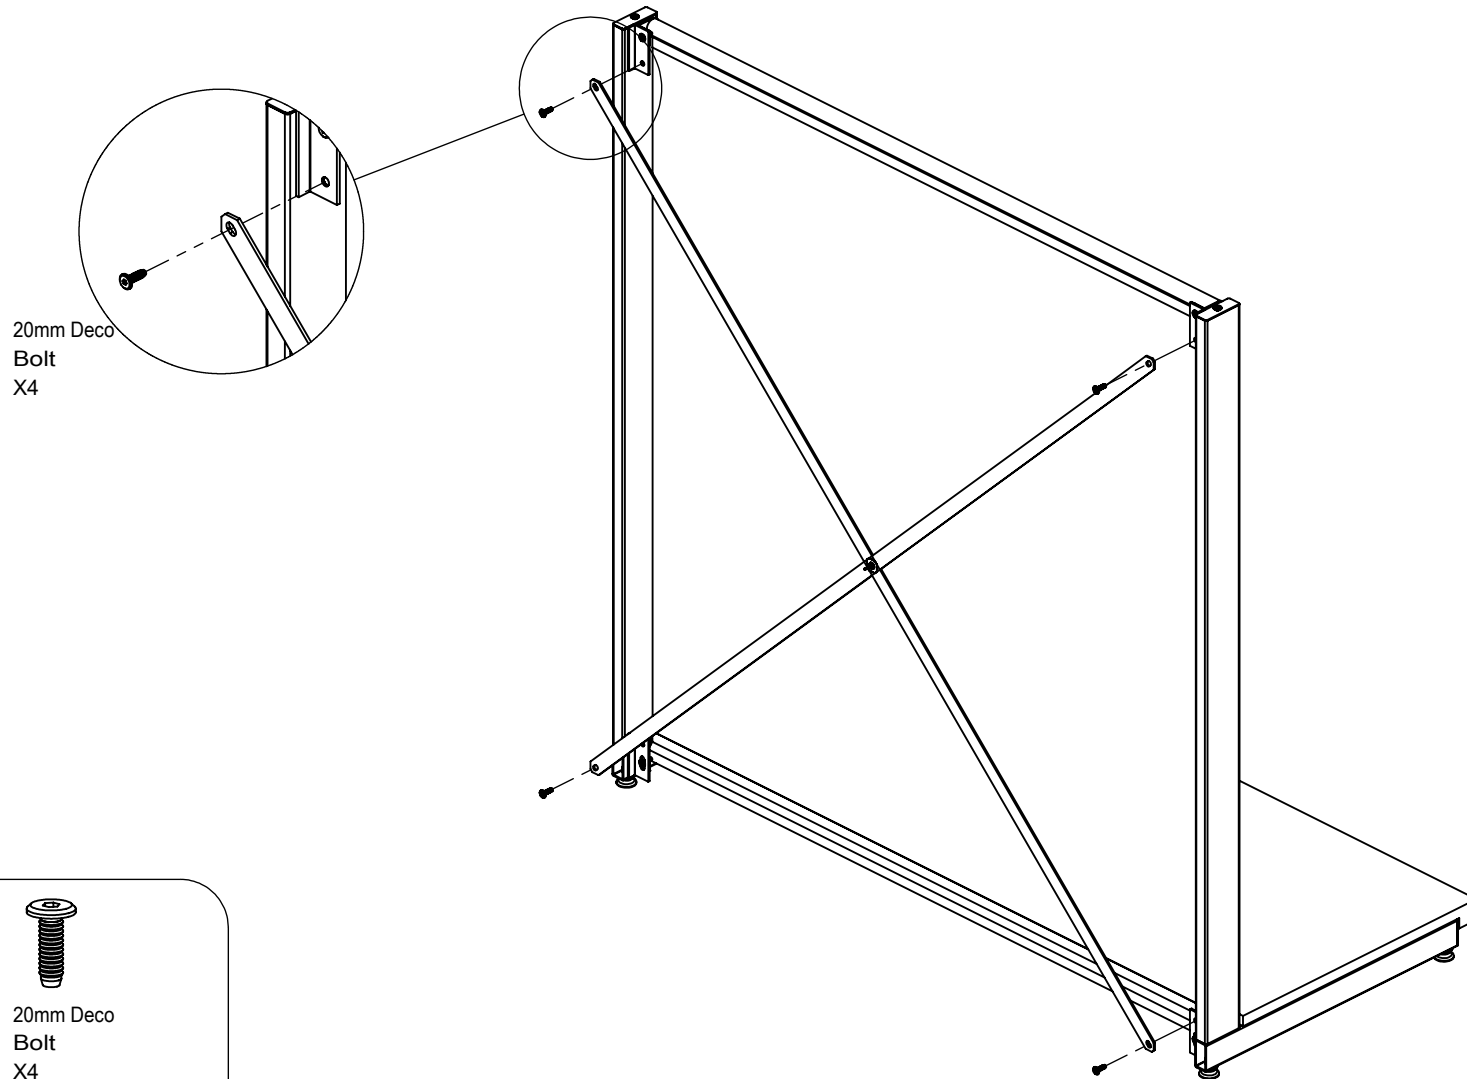

20mm Deco
Bolt
X4



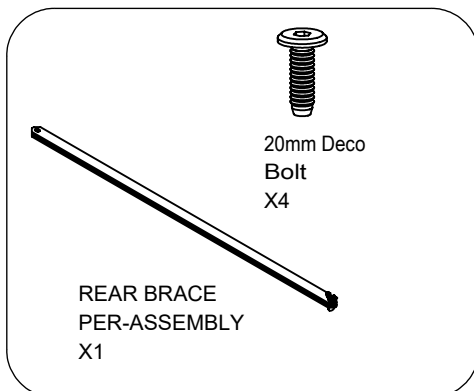


20mm Deco
Bolt
X4

REAR BRACE
PER-ASSEMBLY
X1


Step 5

NOTE: Be sure the notches in the **HEADER BAR** that attach the **HEADER PANEL** are facing the back as shown.

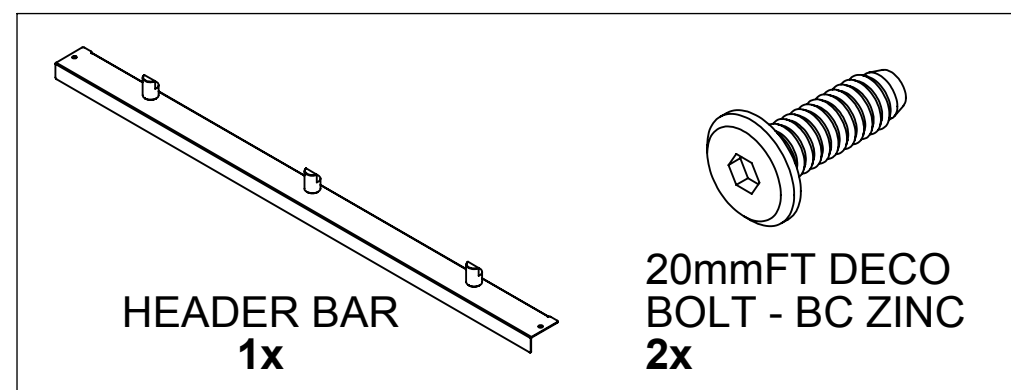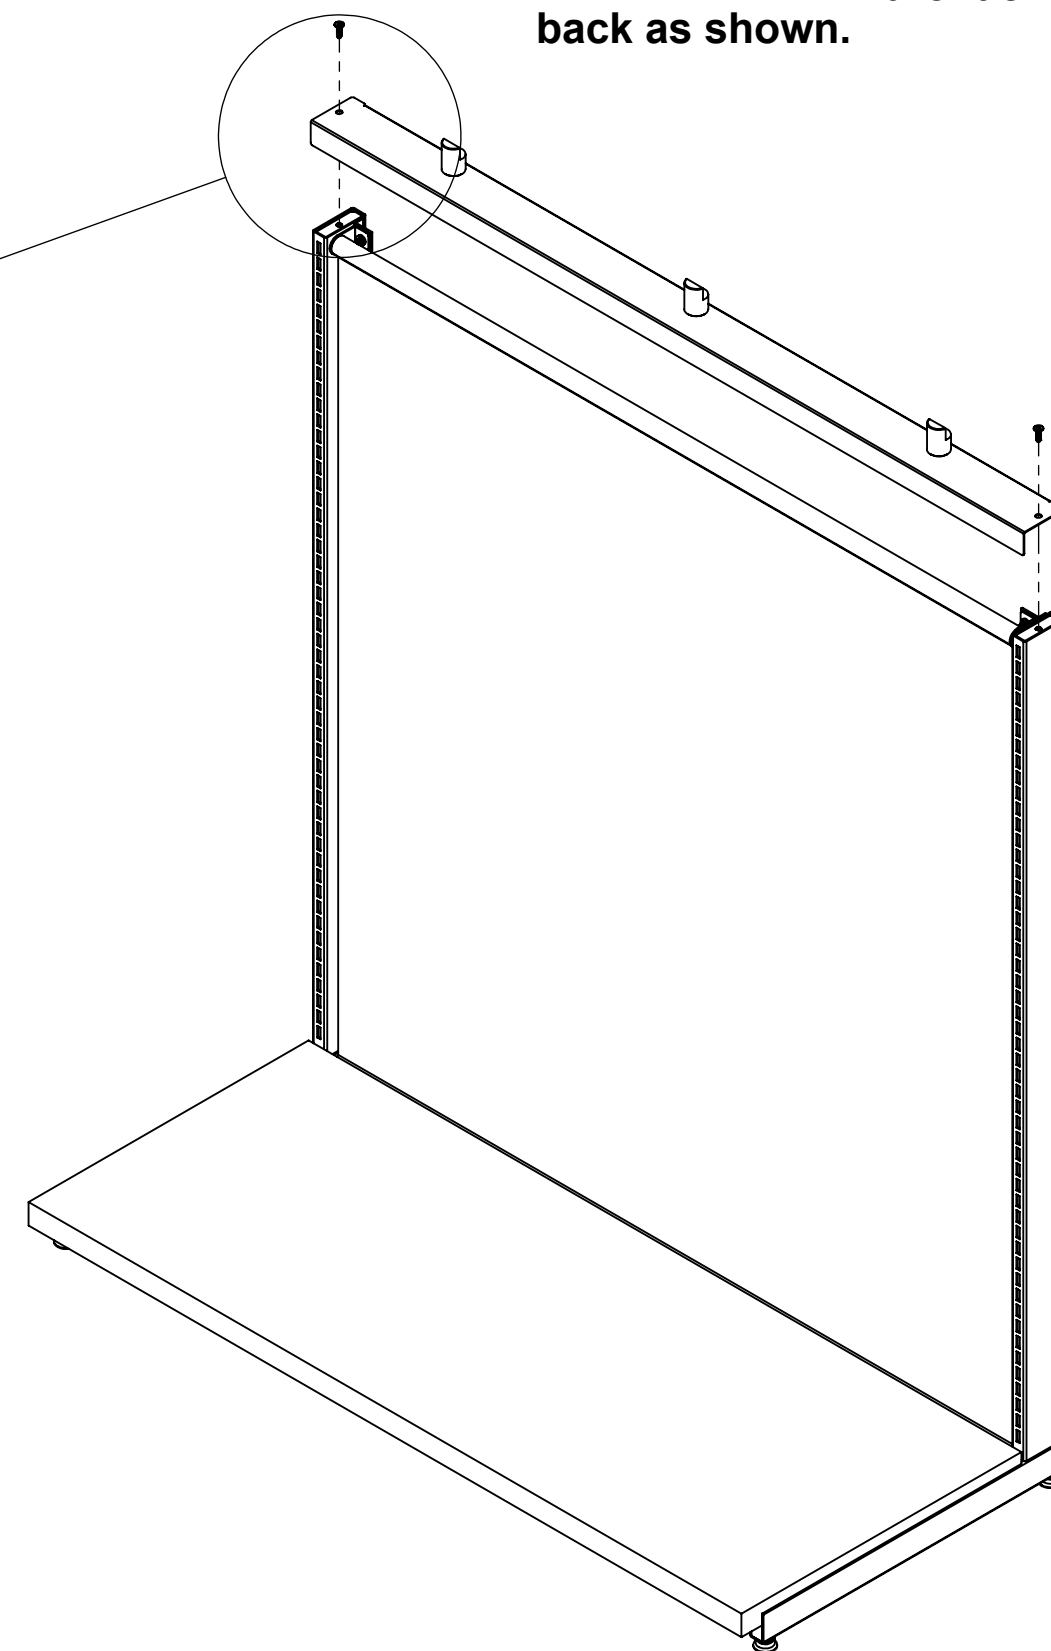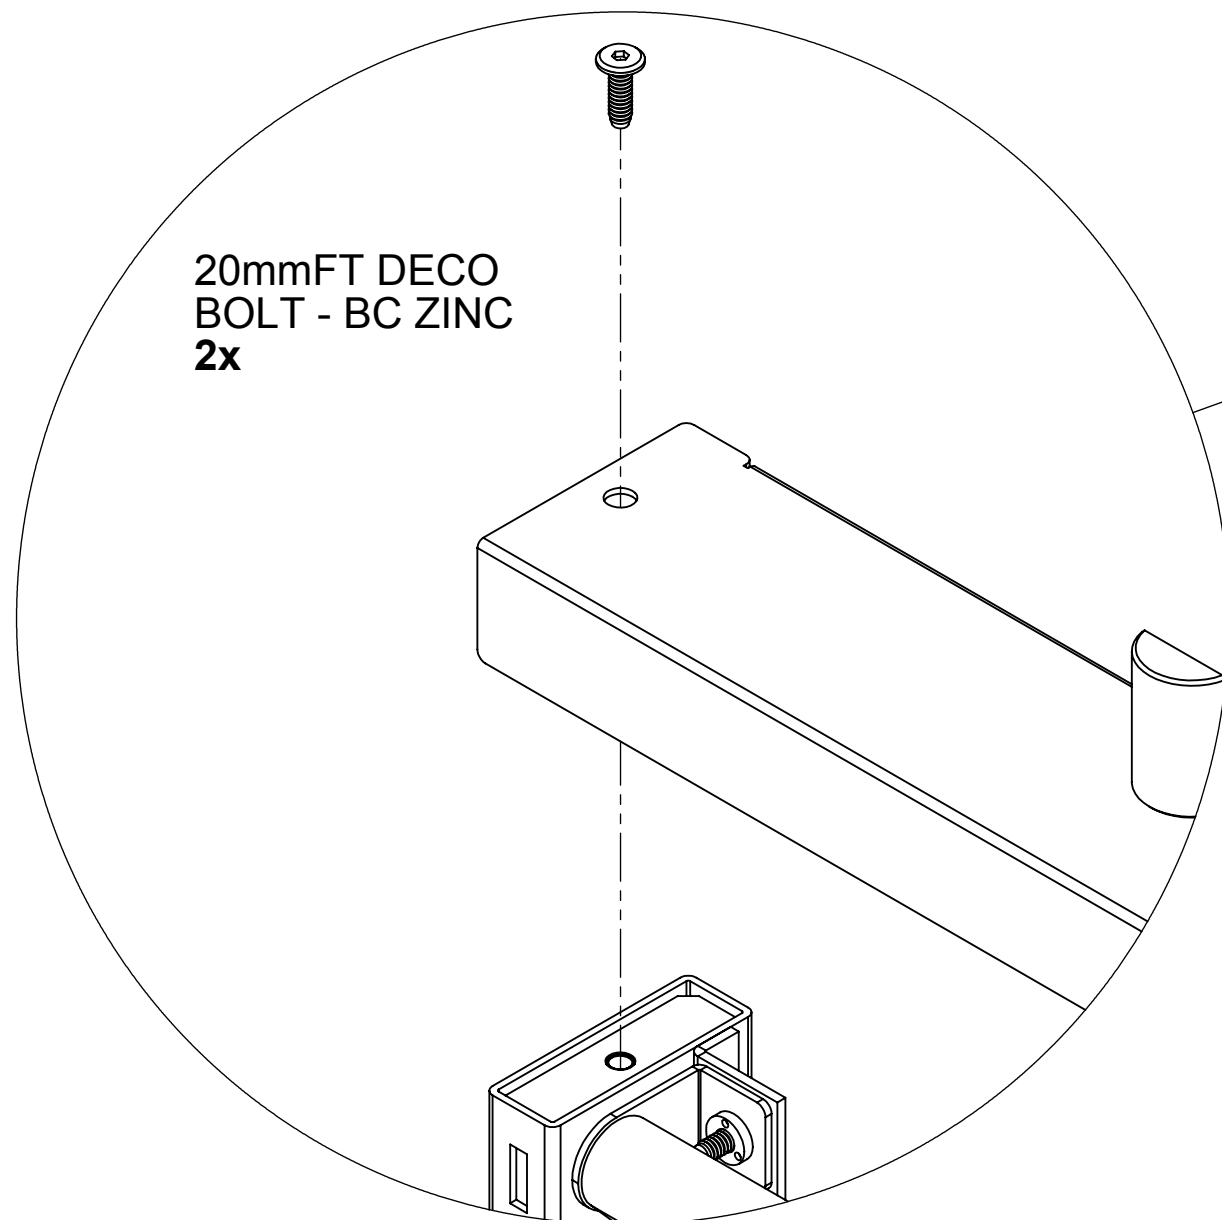


Step 6




A

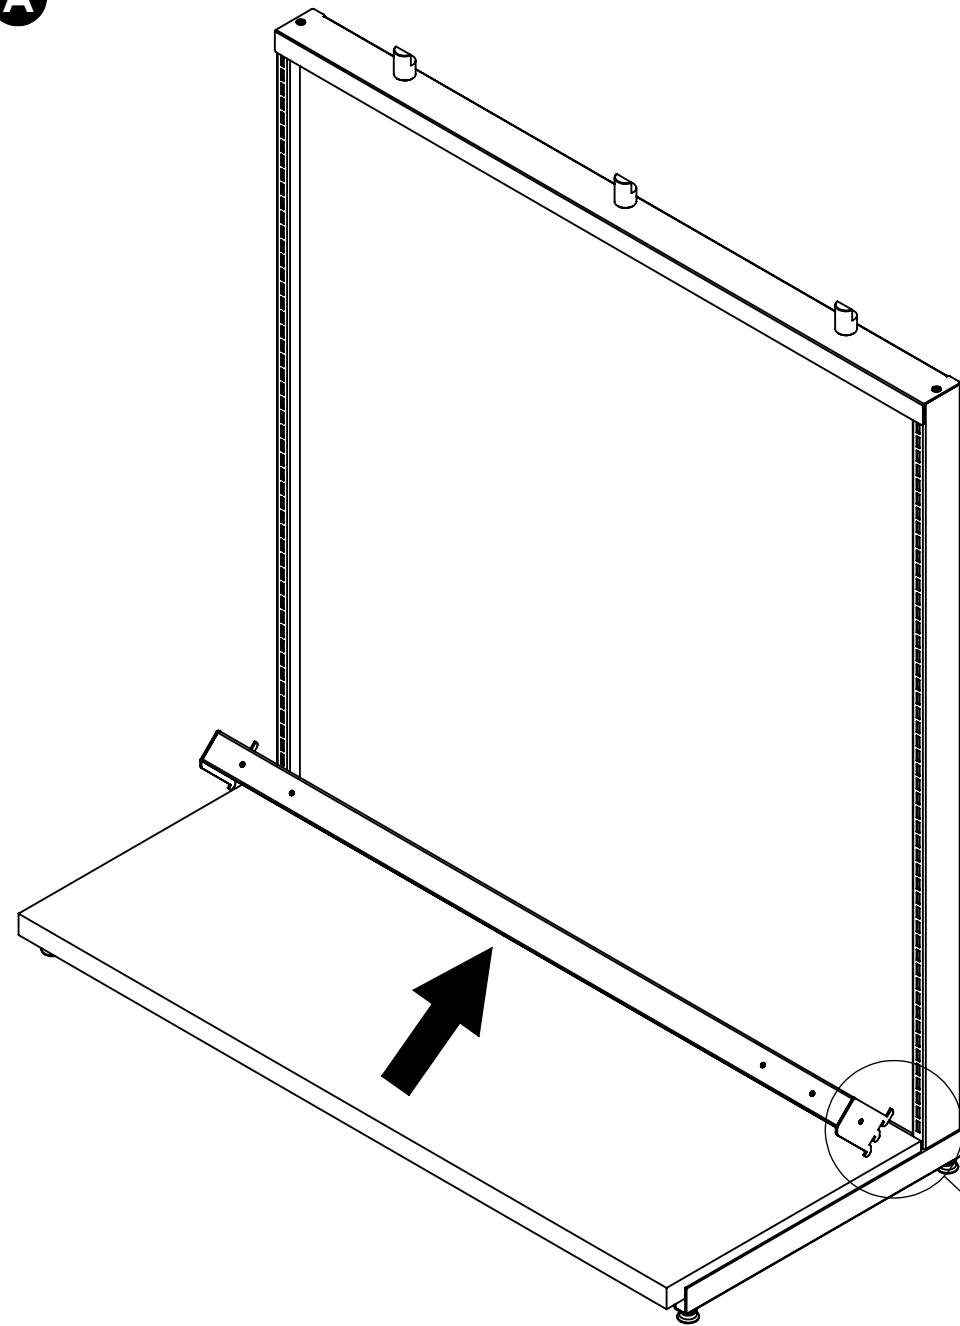

B


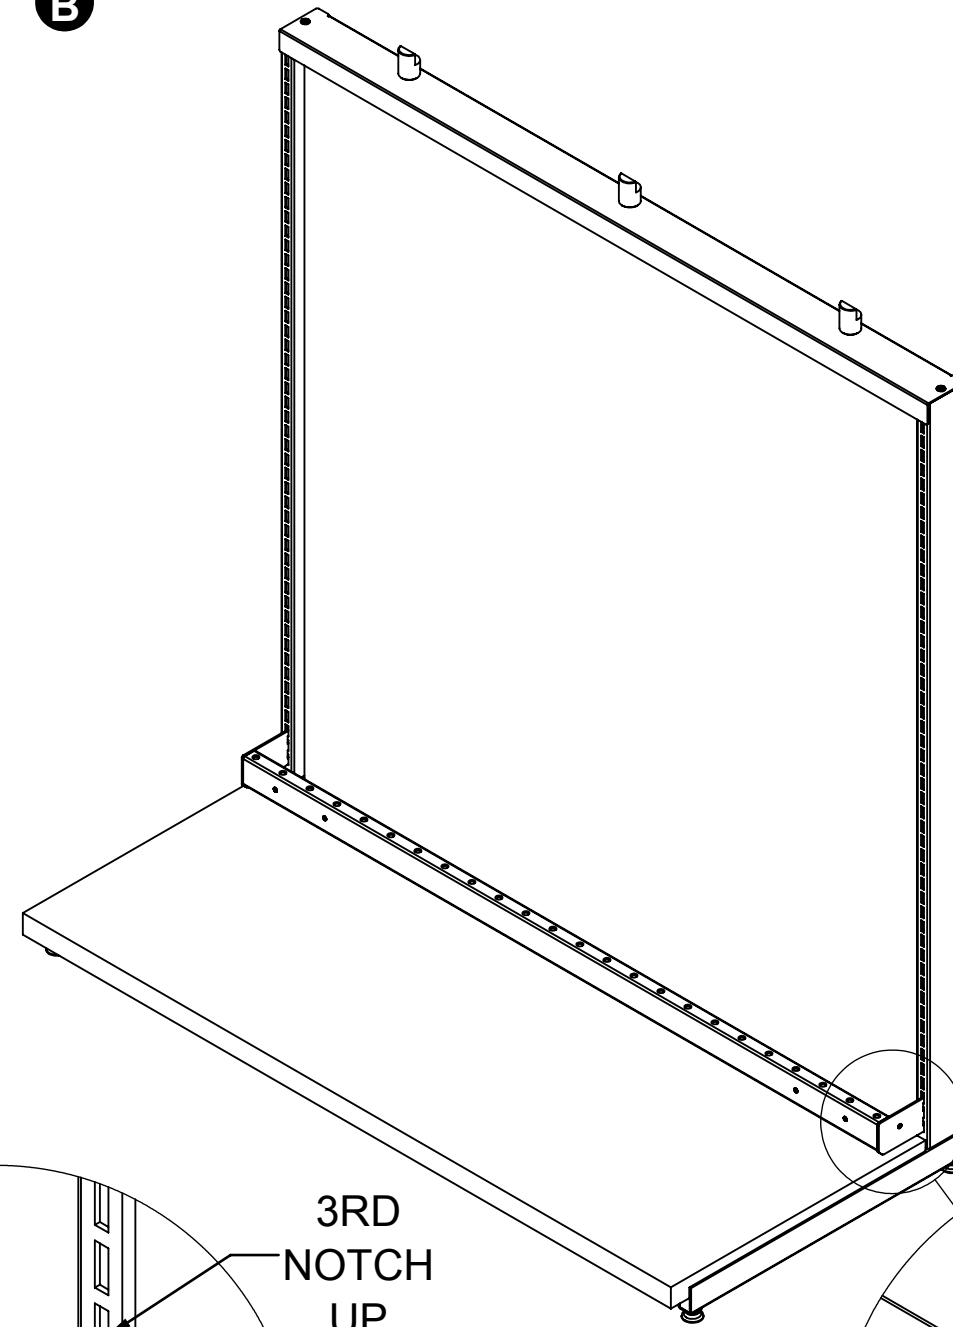


3RD
NOTCH
UP

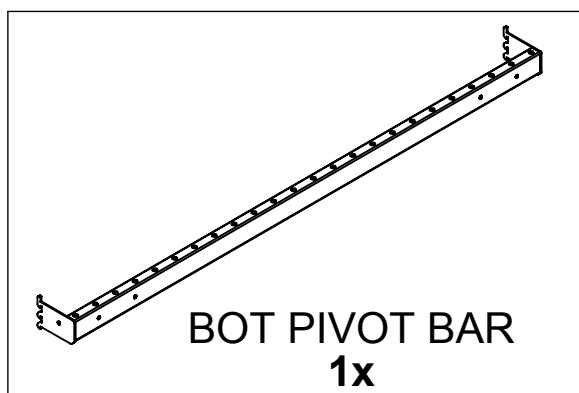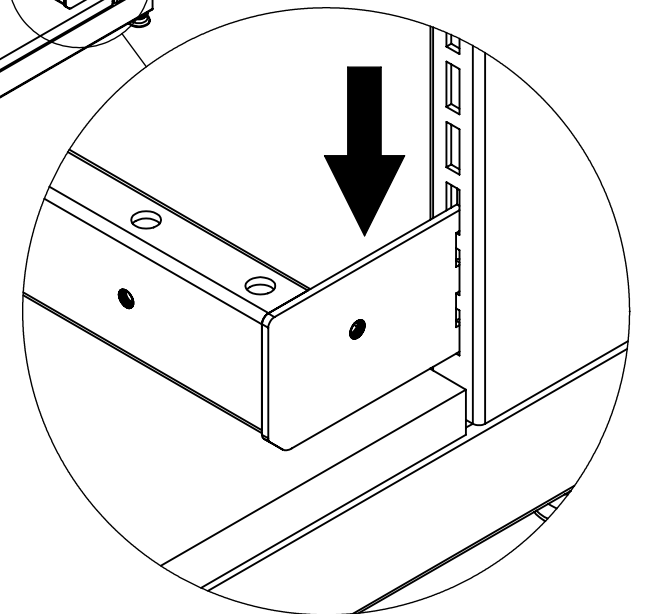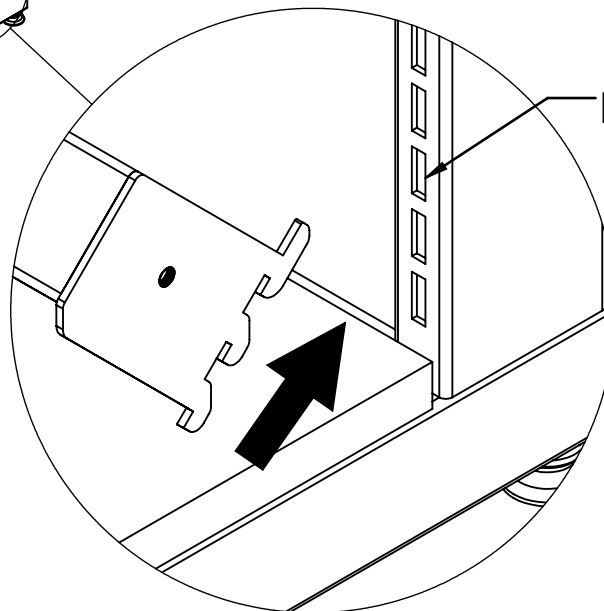

Step 7



A

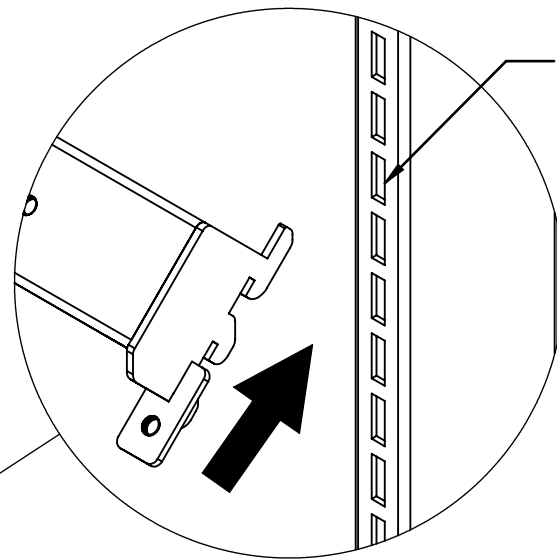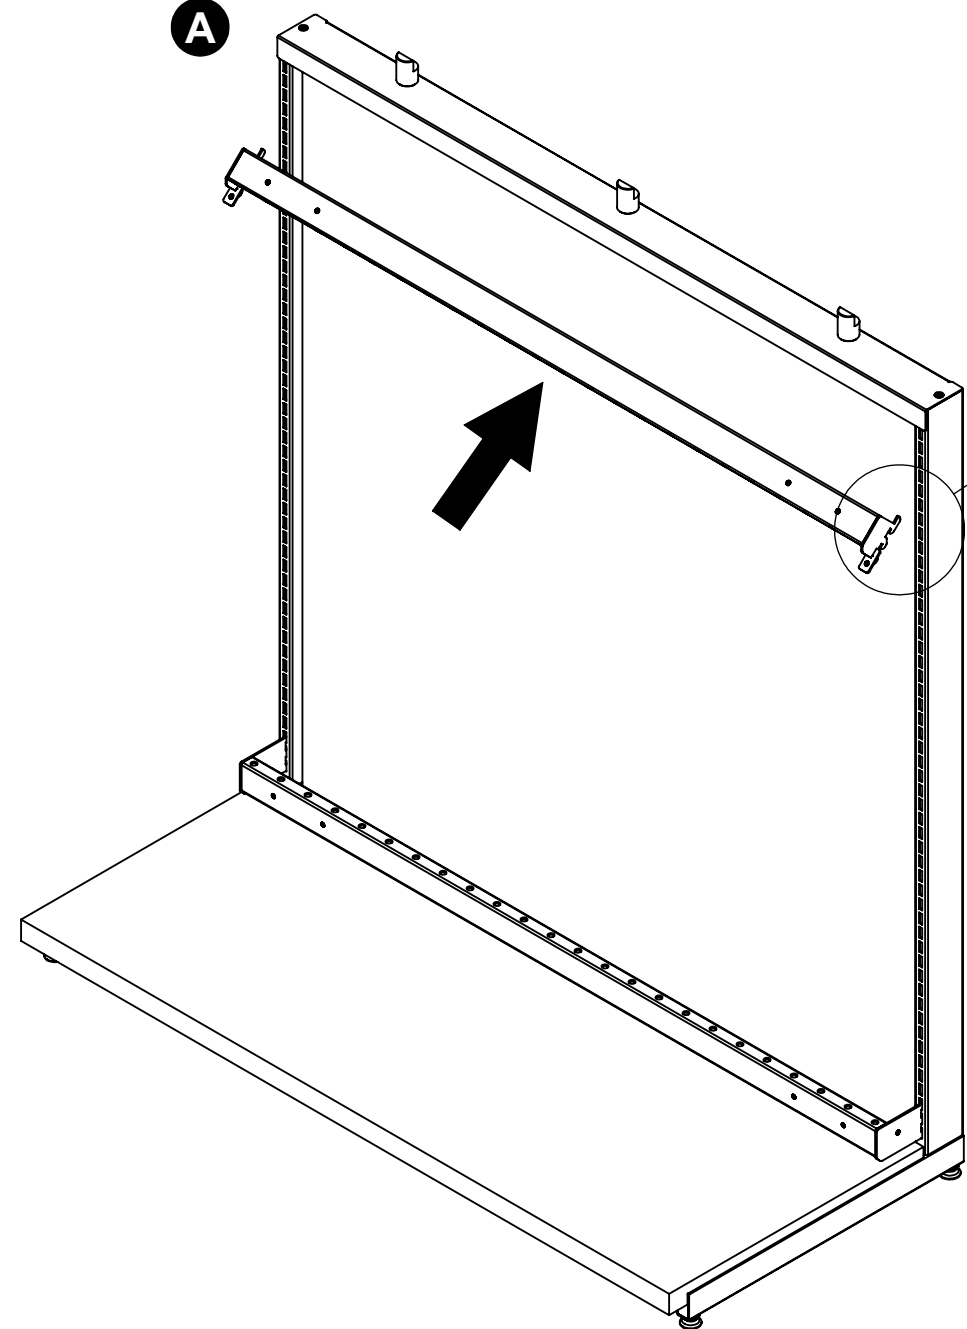


6TH
NOTCH
DOWN

NOTE: It is important to install the screw in the TOP PIVOT BAR for safety as detailed in diagram B.

B

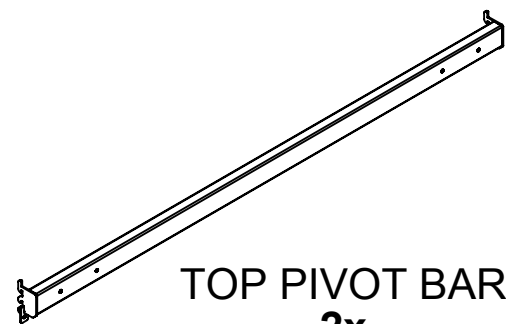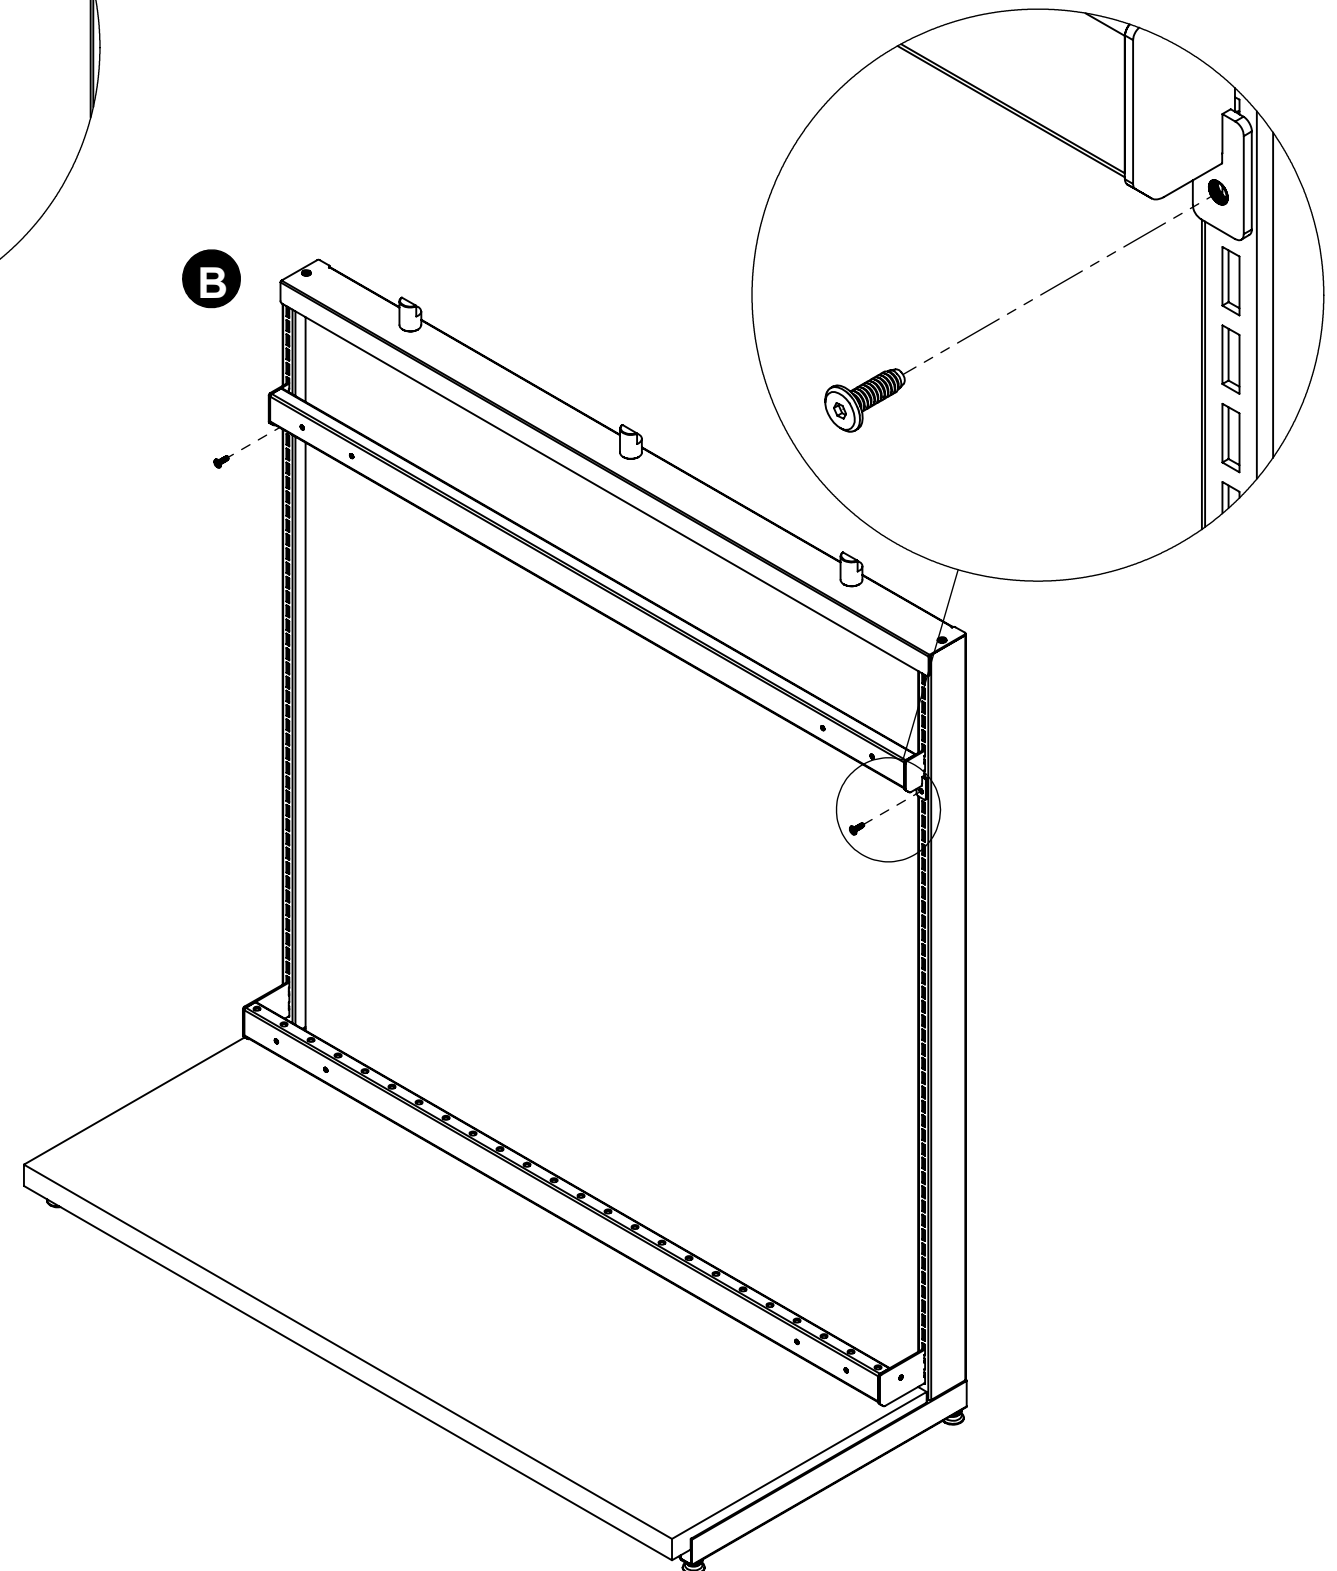


TOP PIVOT BAR
2x


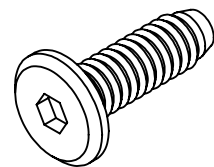


20mmFT DECO
BOLT - BC ZINC
2x


Step 8

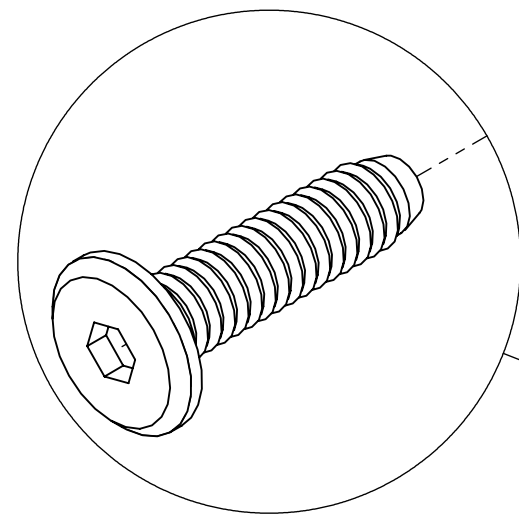

23mmFT DECO
BOLT - BC ZINC
3x

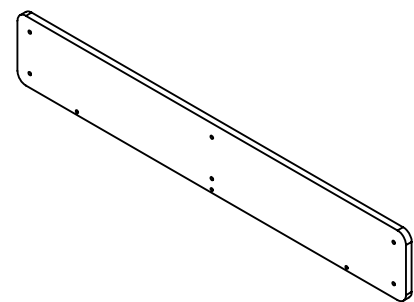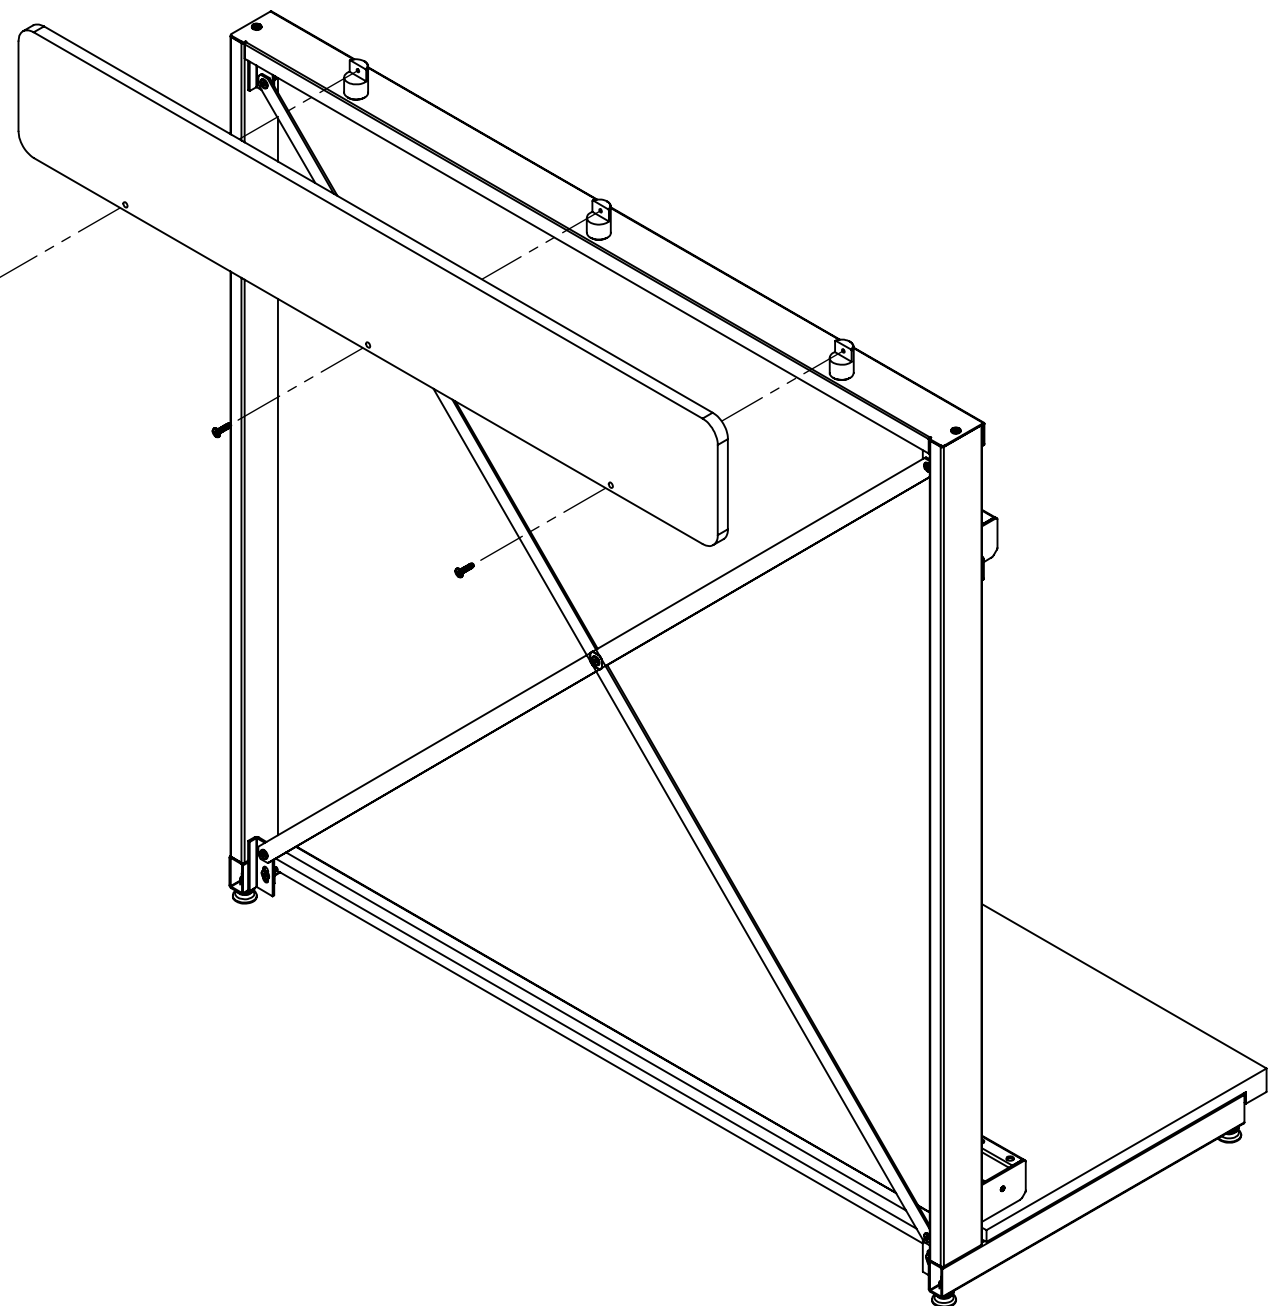



HEADER PANEL
1x

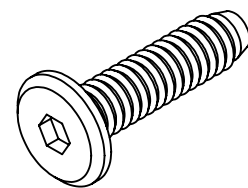



23mmFT DECO
BOLT - BC ZINC
3x

Step 9

NOTE: Be sure the TOP GRAPHIC BRACKET and the BOTTOM GRAPHIC BRACKET are flush with the end of the TOP & BOTTOM PIVOT BARS.

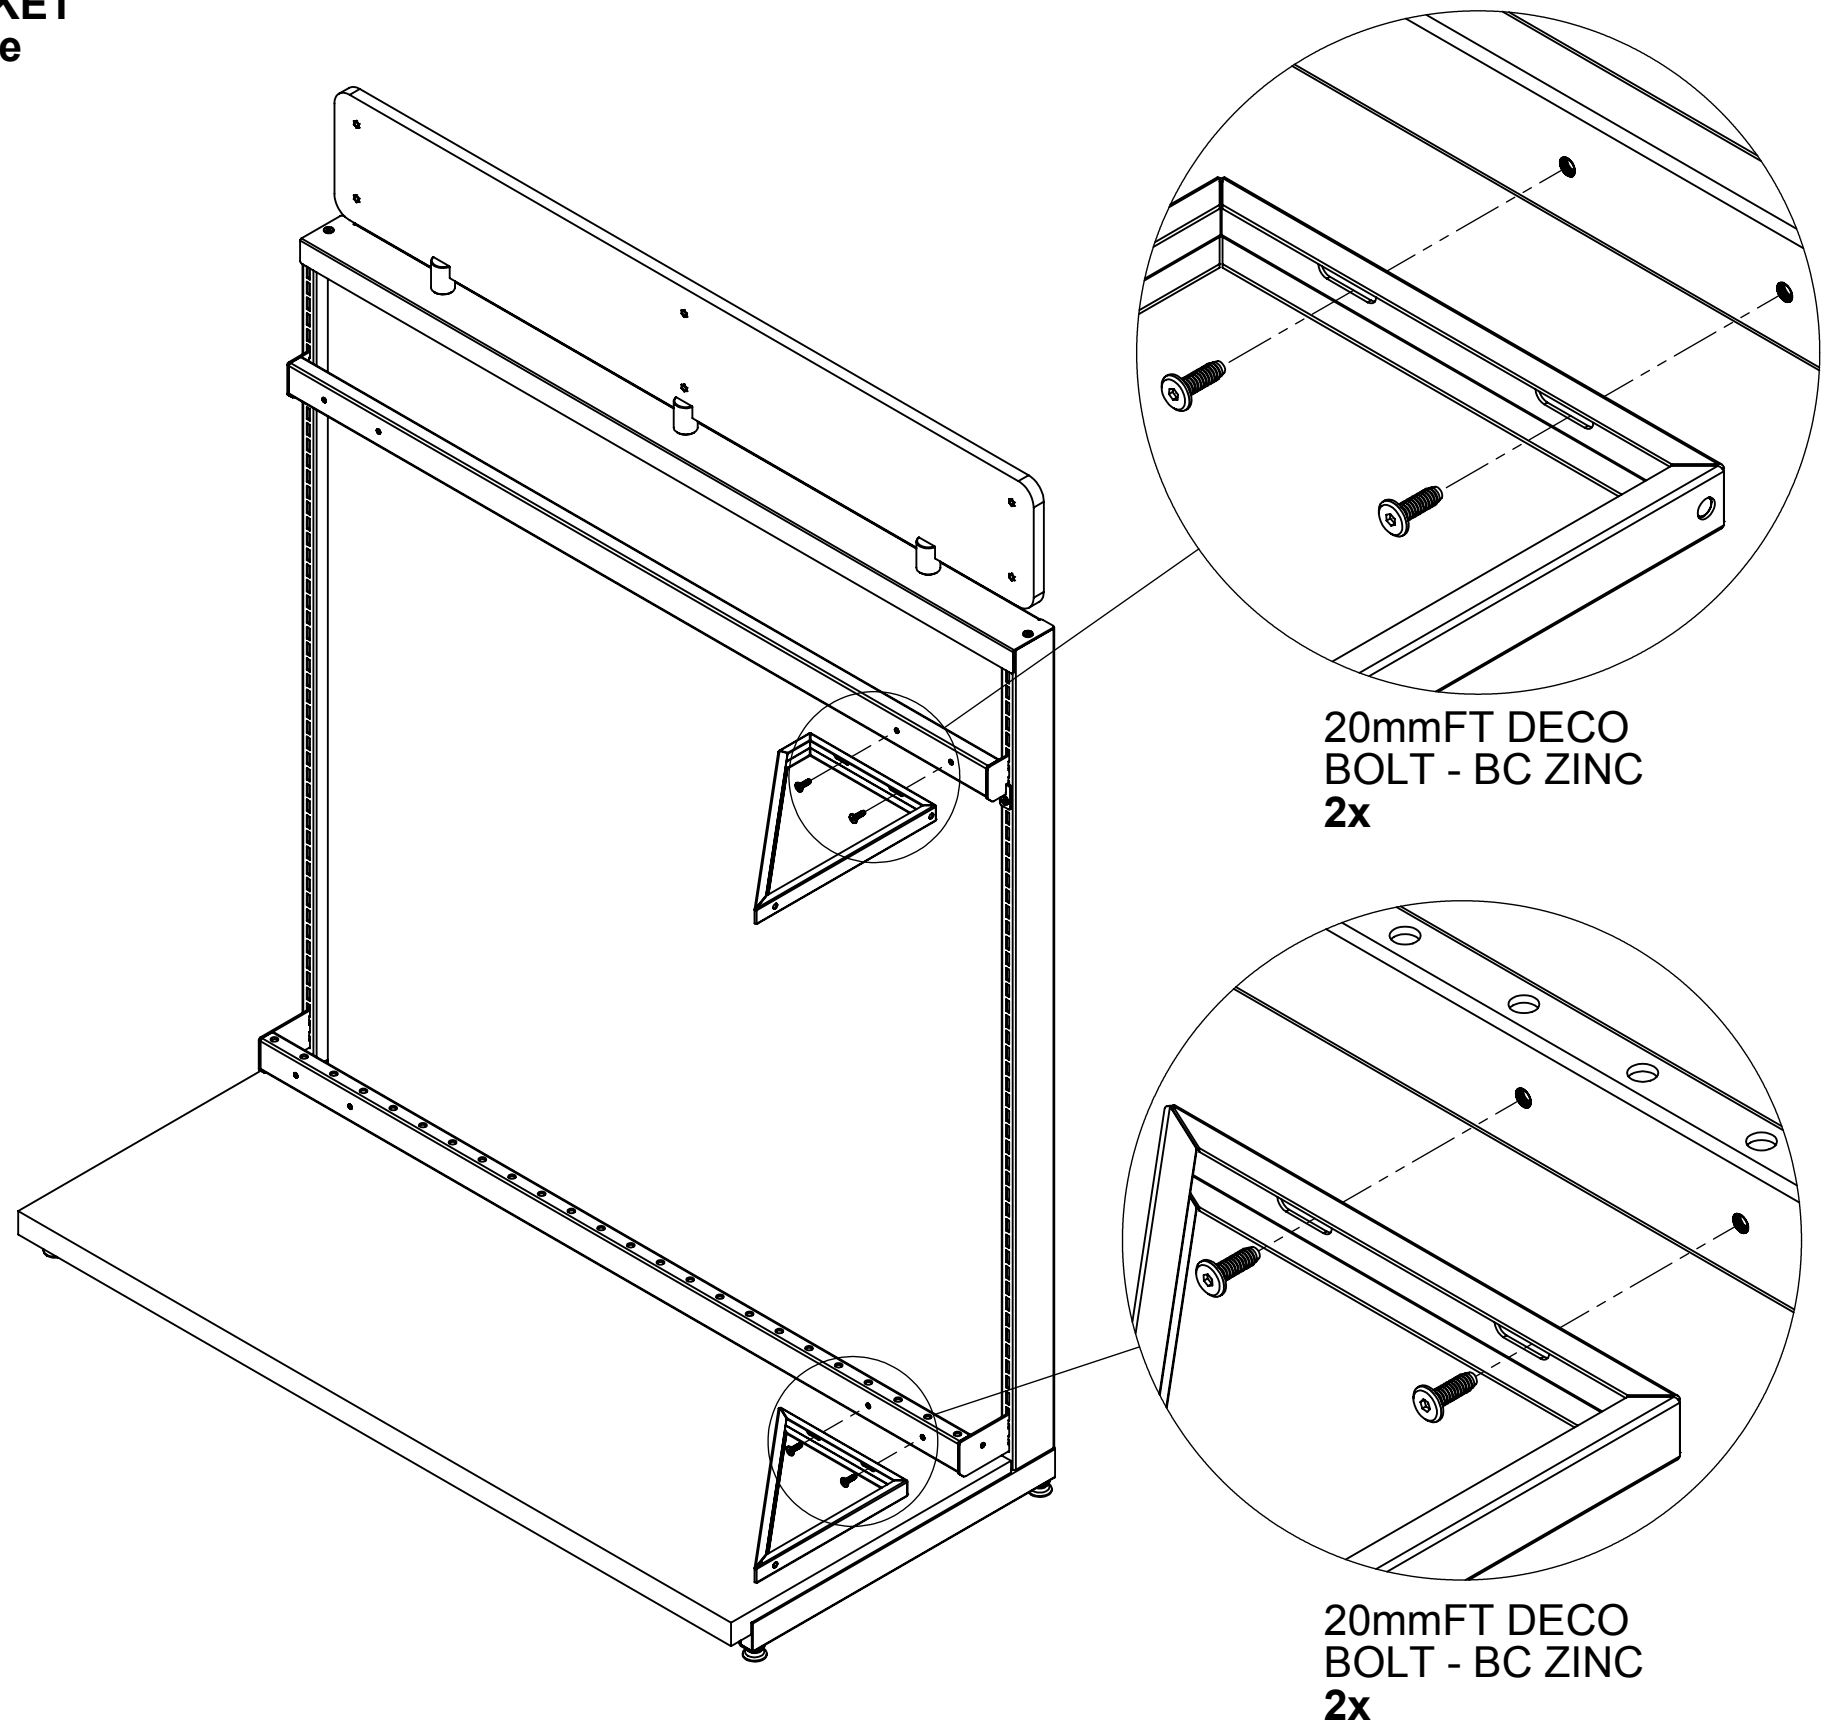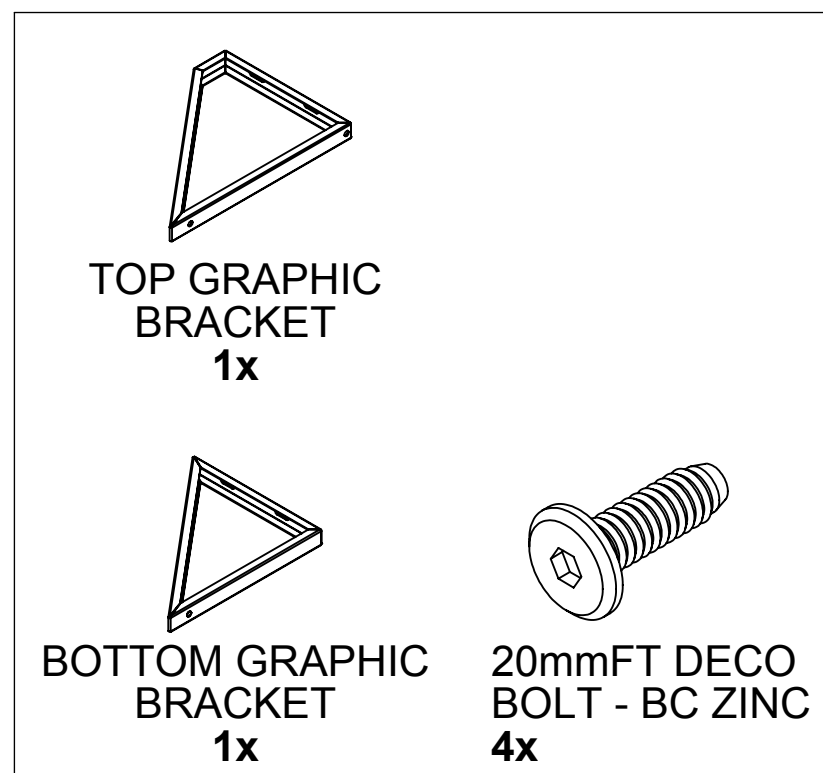

Step 10


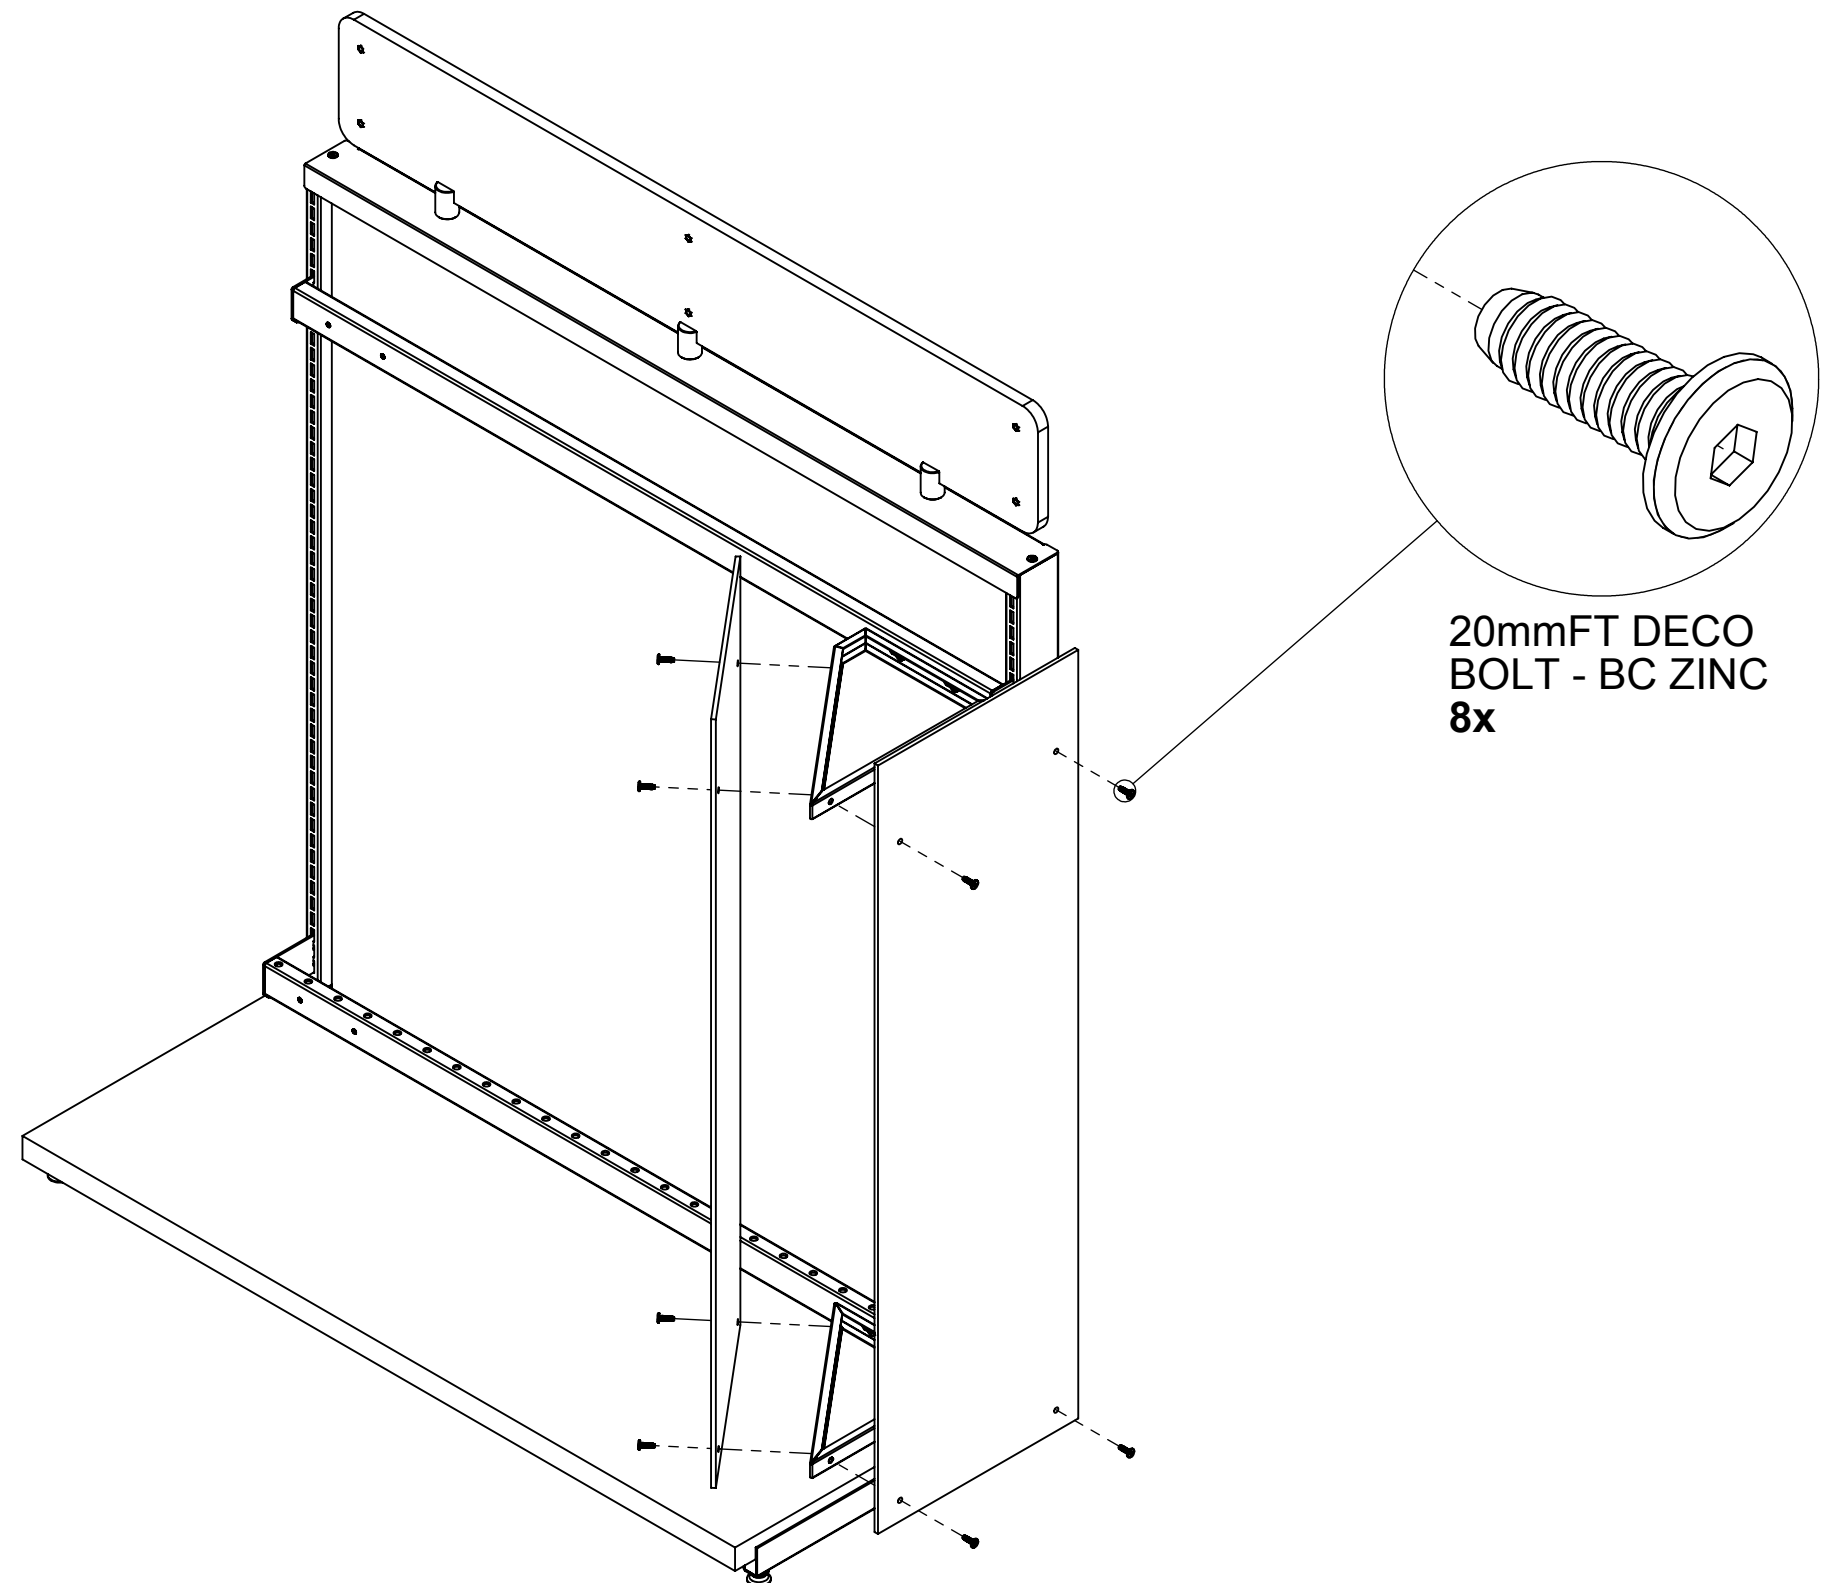
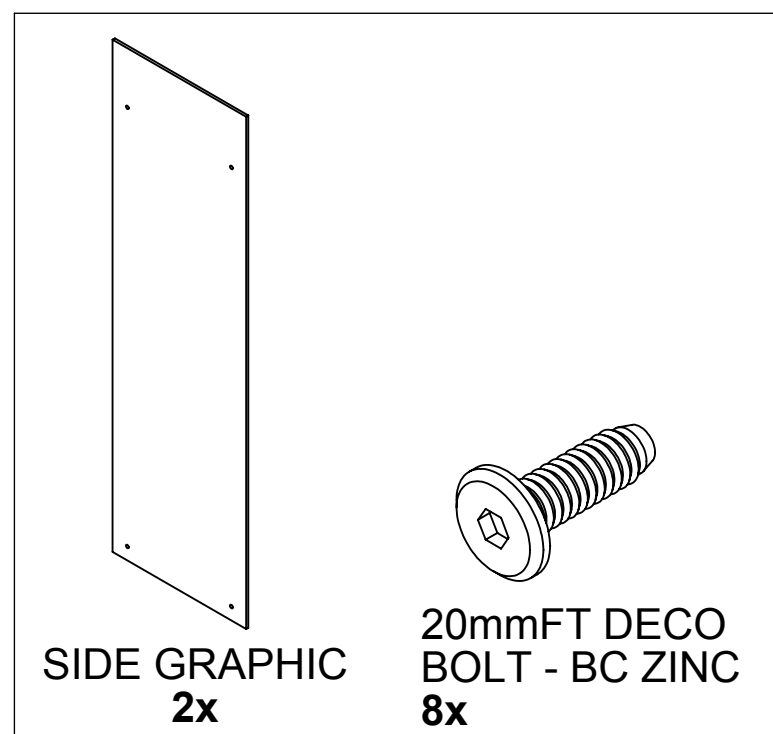


Step 11

Note:


Start on the left side of the display

Install the wing and Left stop in the 7th hole.

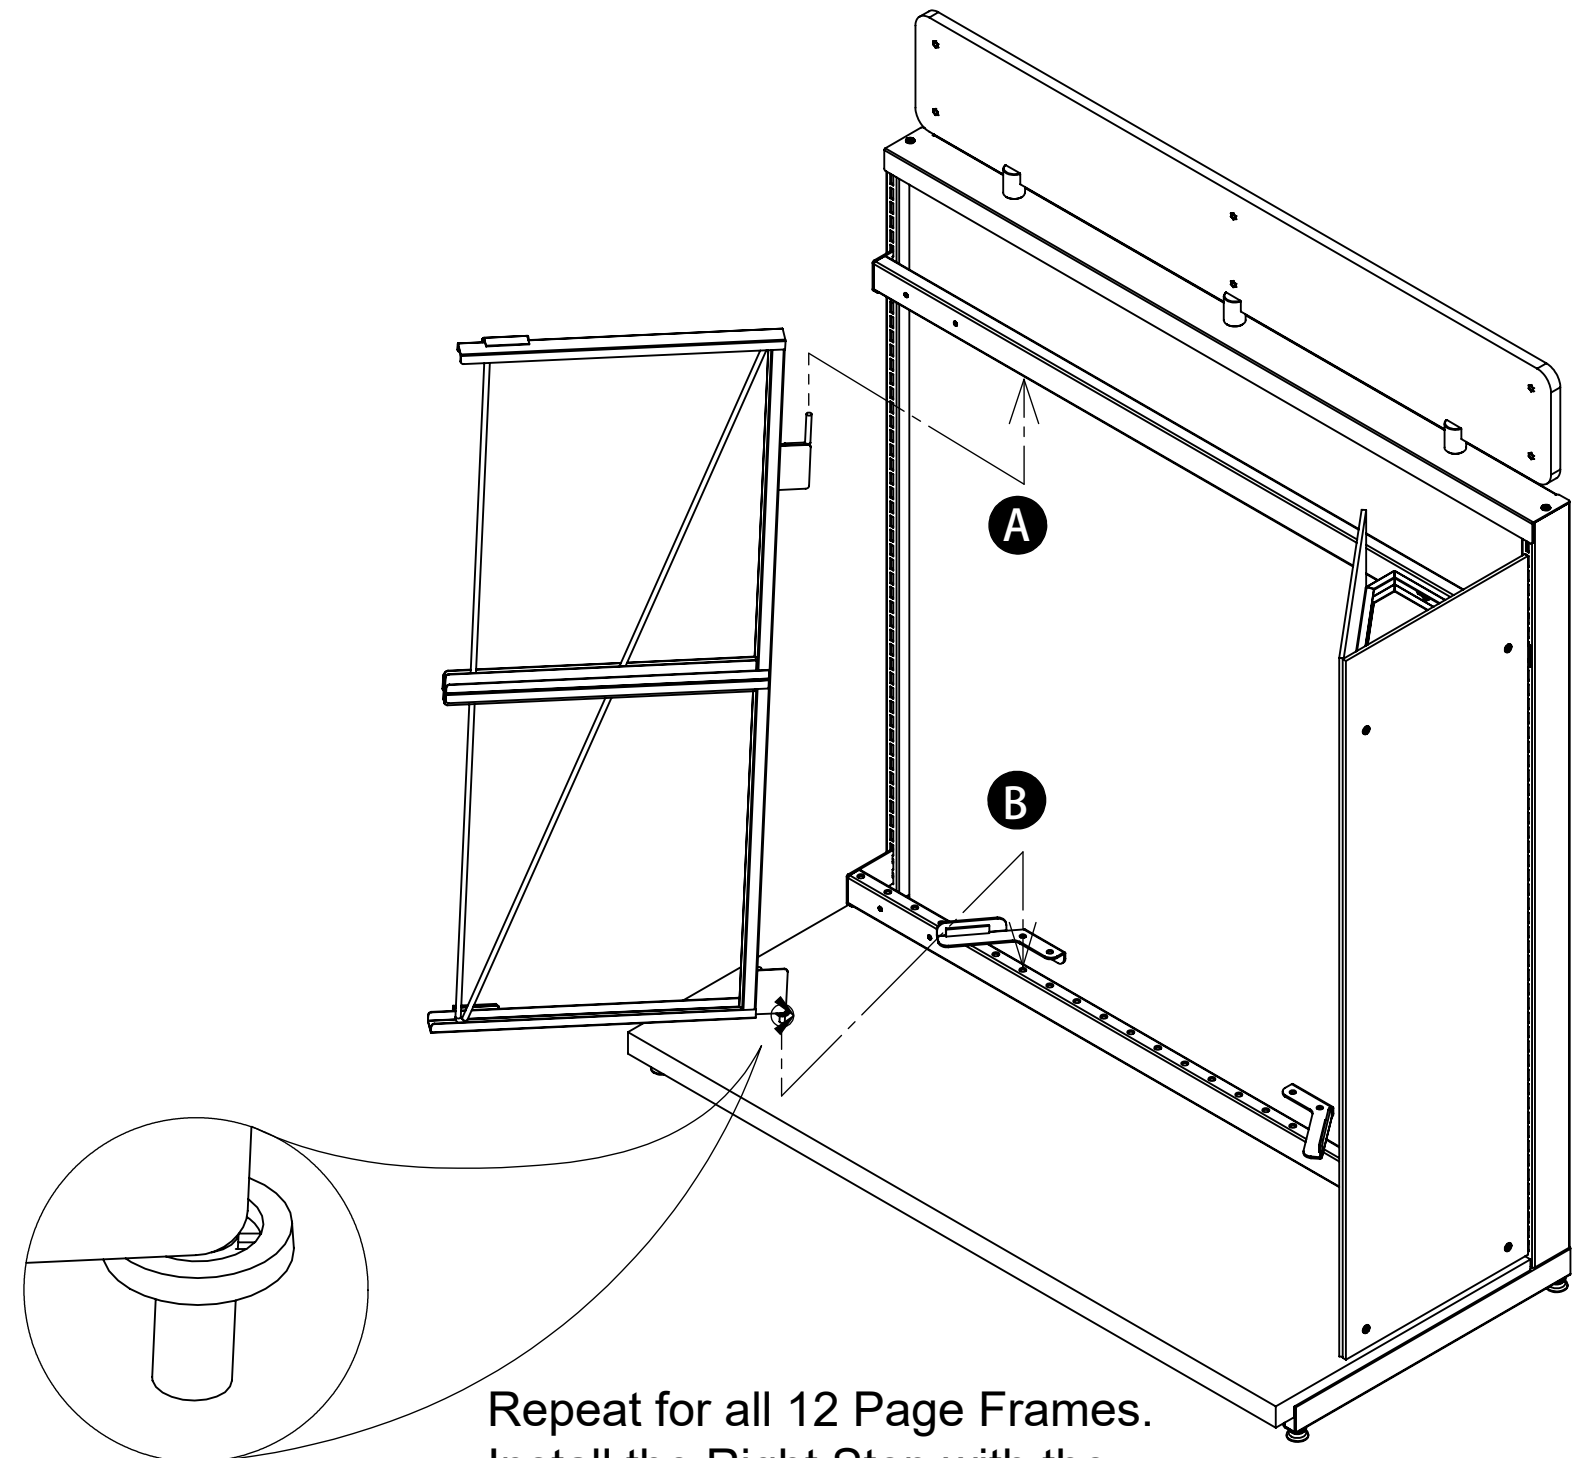
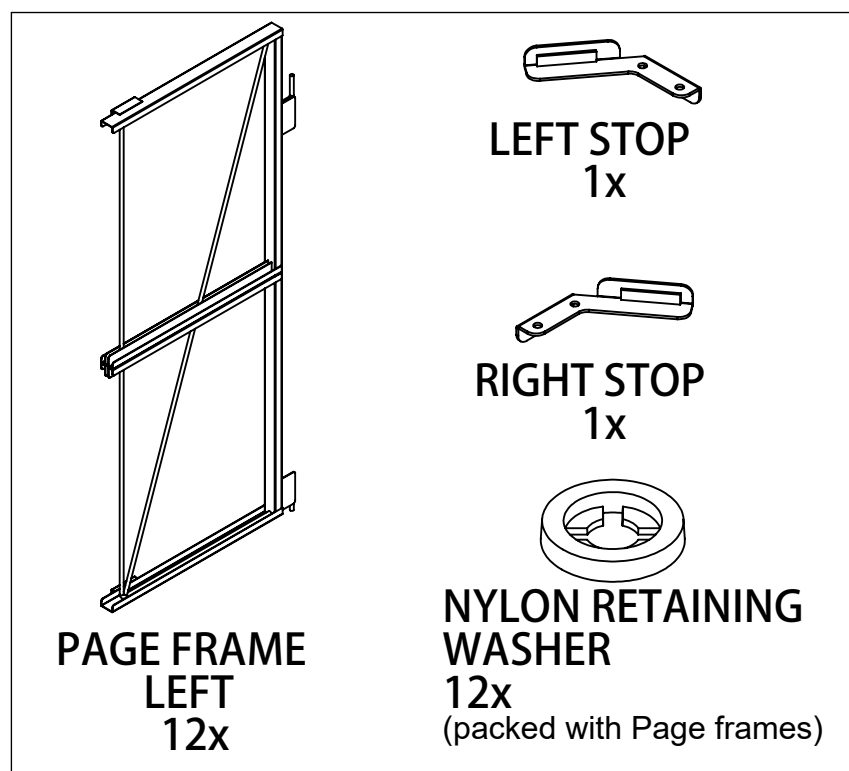
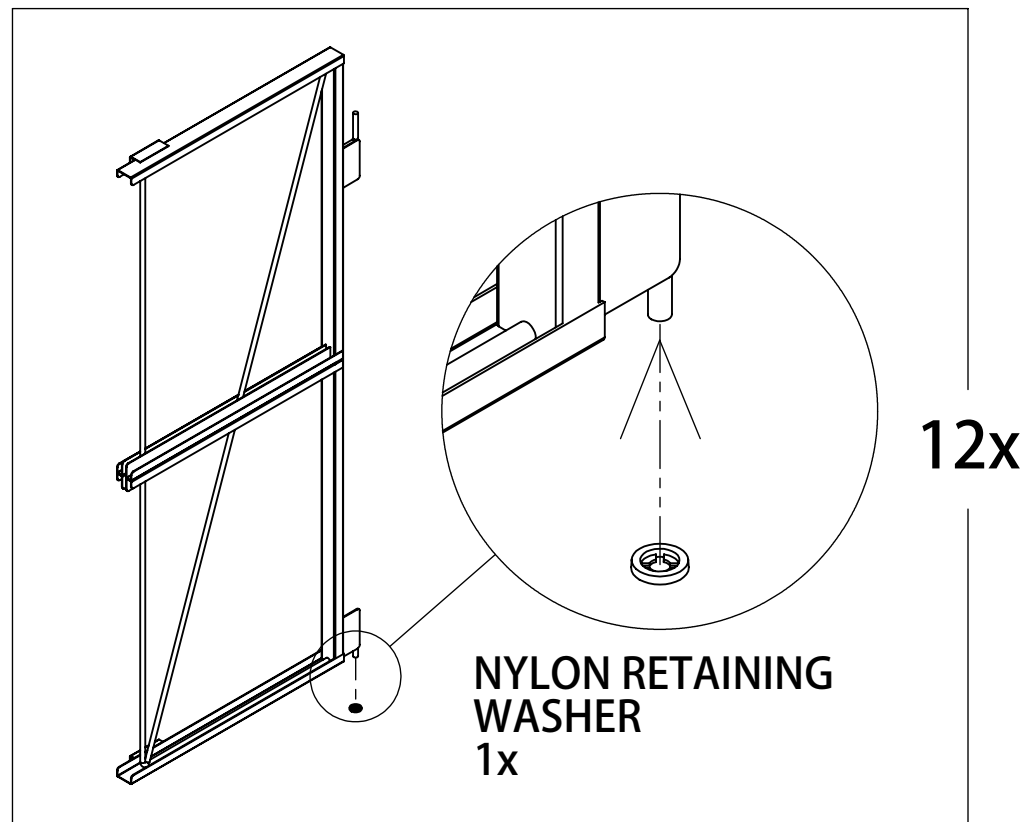


Repeat for all 12 Page Frames.
Install the Right Stop with the
11th and 12th Page Frame.

Step 12

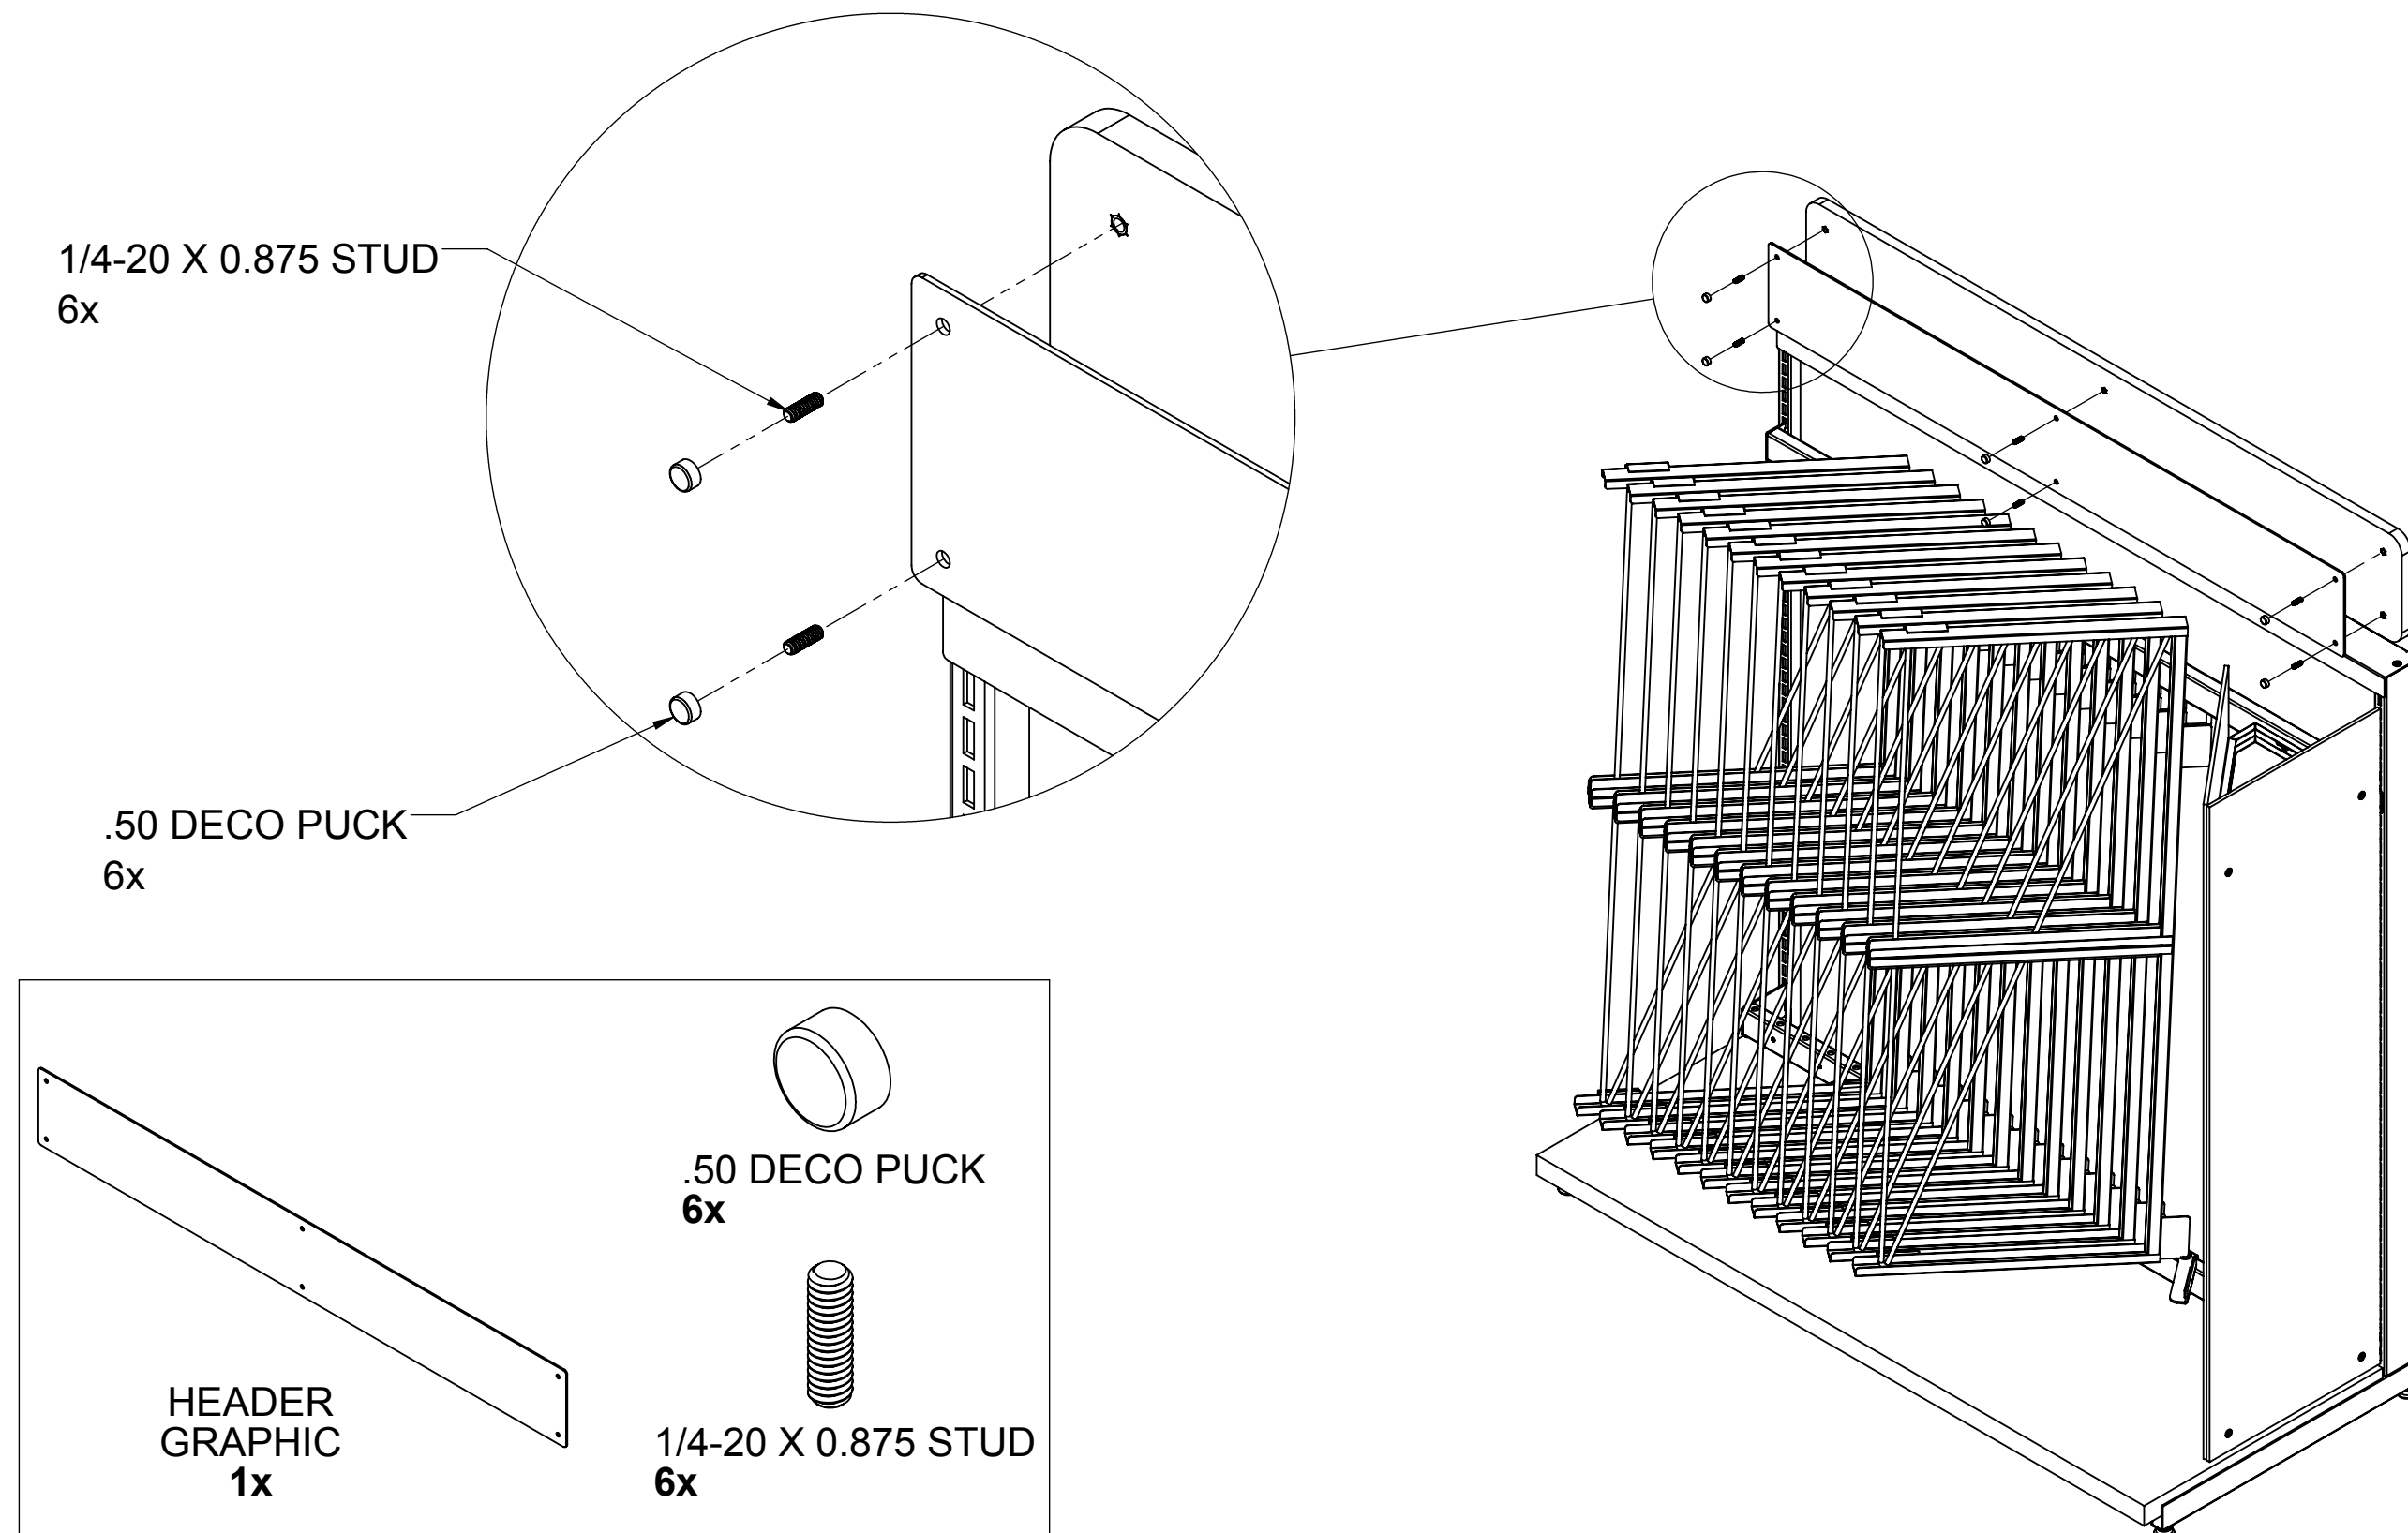


Step 13

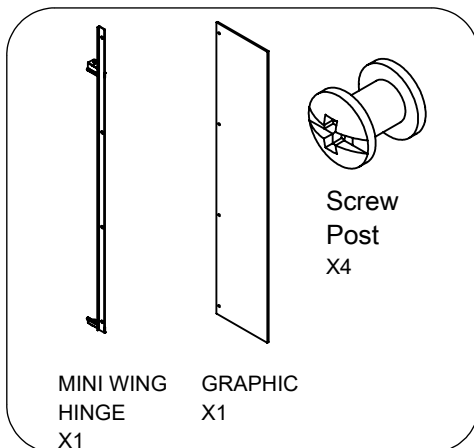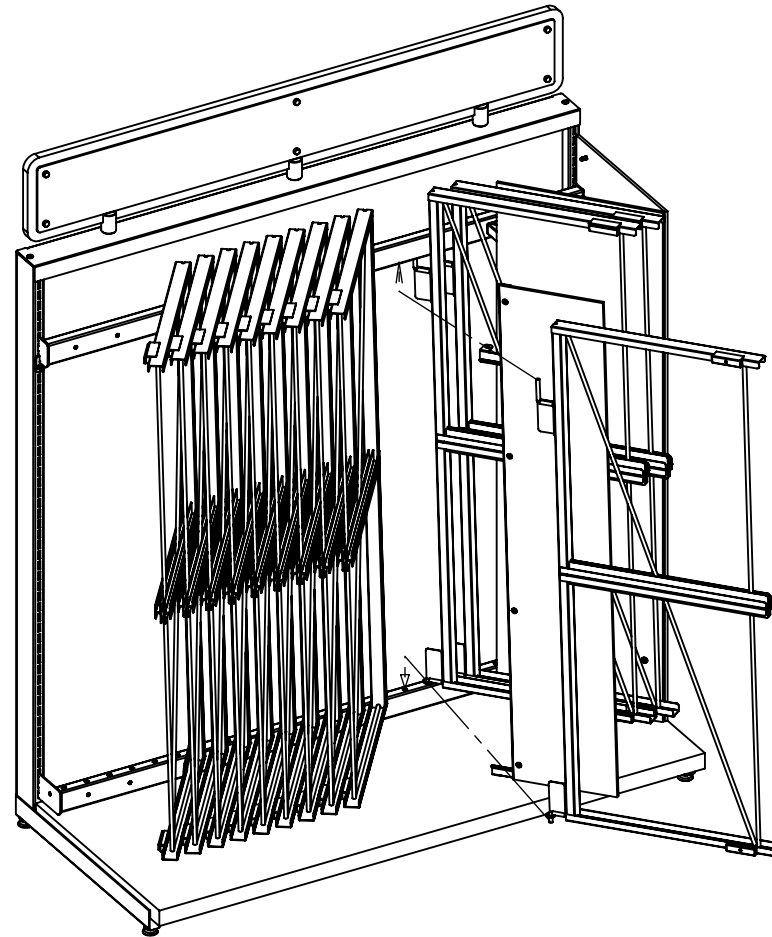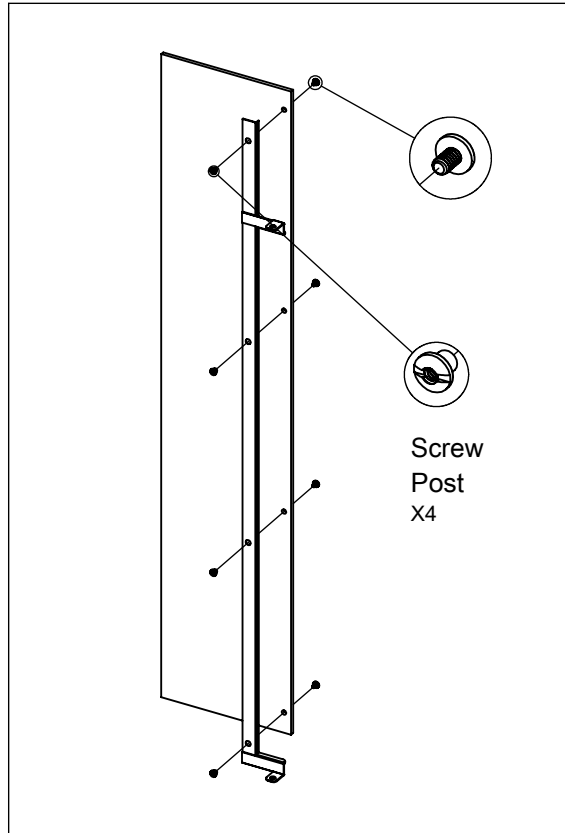


Step 14

NOTE: Repeat STEP 1 to STEP 8 to build another unit.



NOTE: Be sure the TOP GRAPHIC BRACKET and the BOTTOM GRAPHIC BRACKET are flush with the end of the TOP & BOTTOM PIVOT BARS.

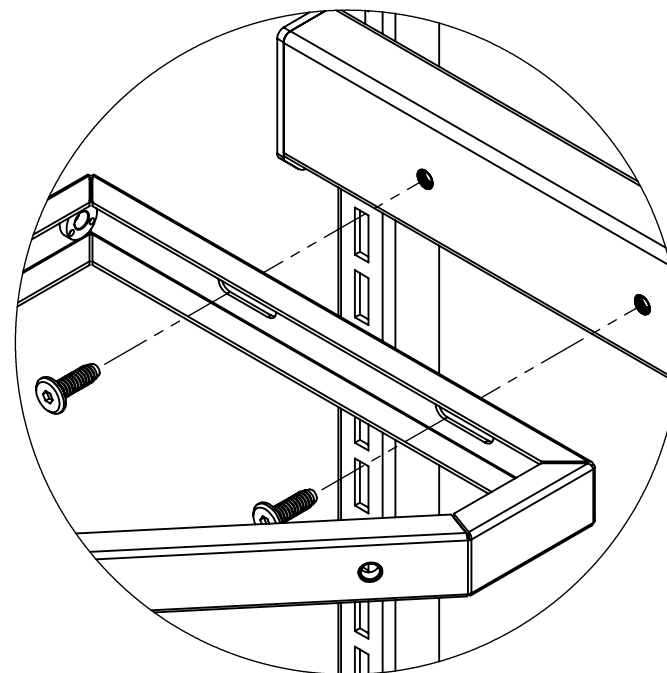


20mmFT DECO
BOLT - BC ZINC
2x

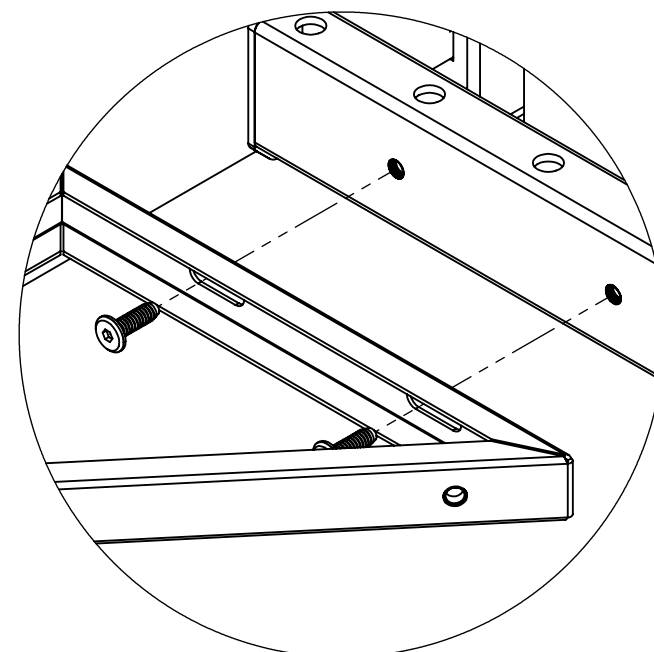



20mmFT DECO
BOLT - BC ZINC
2x

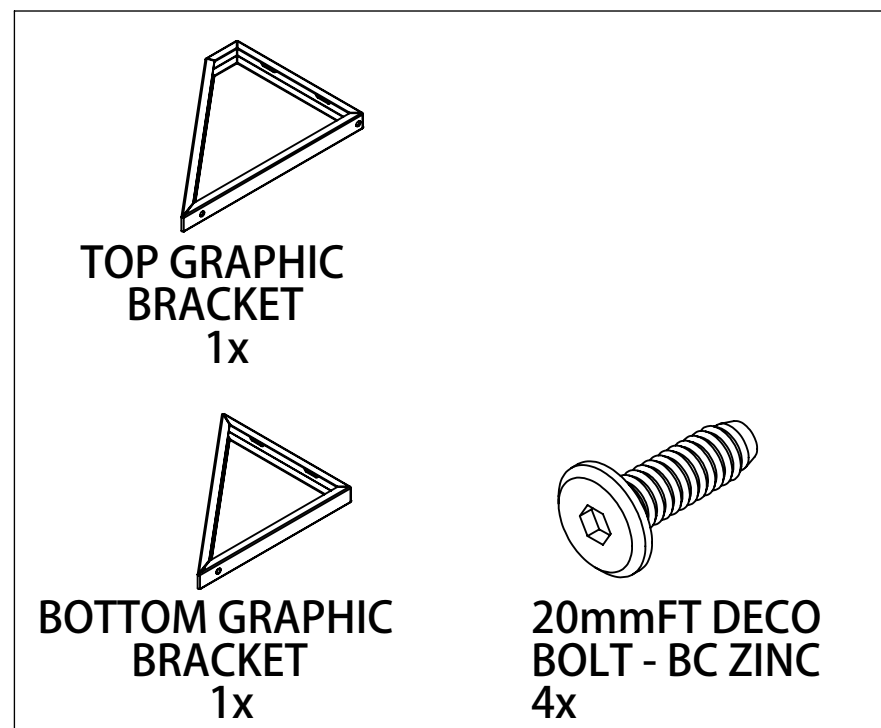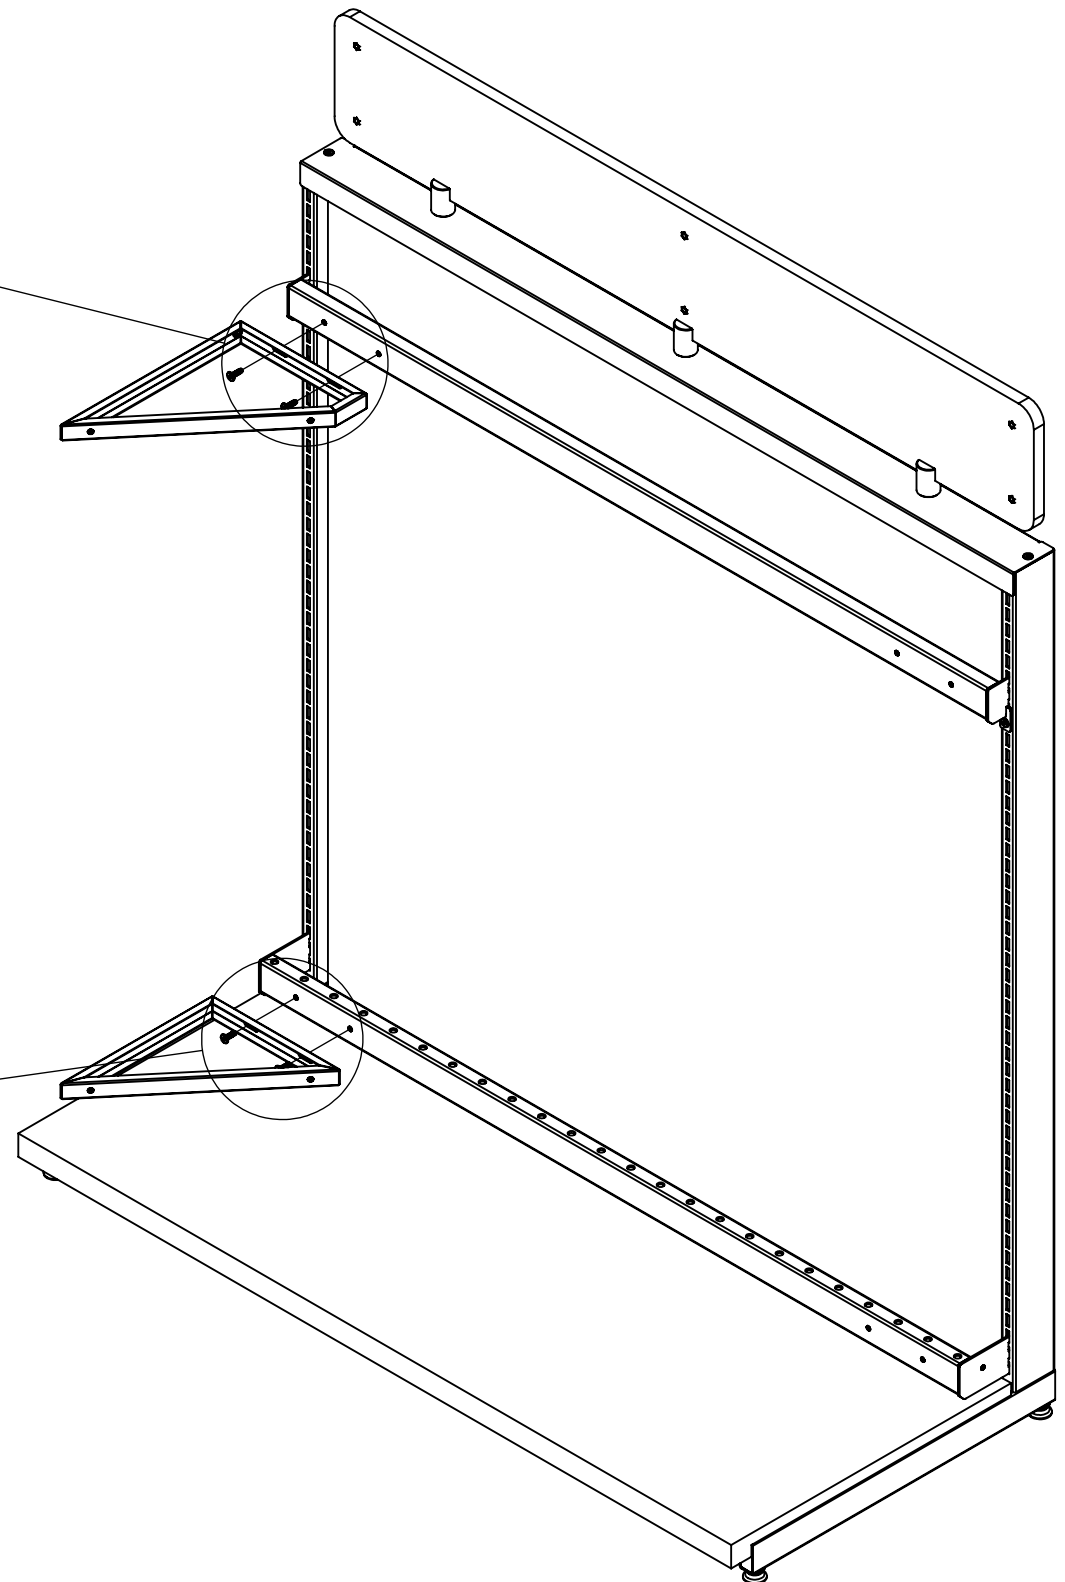


Step 15

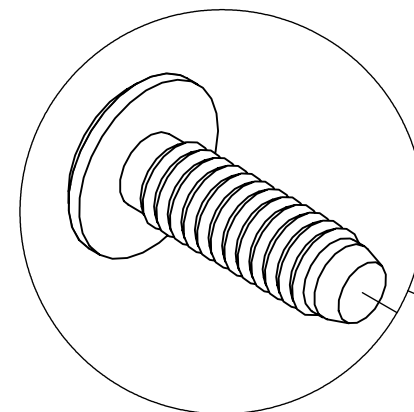

20mmFT DECO
BOLT - BC ZINC
8x

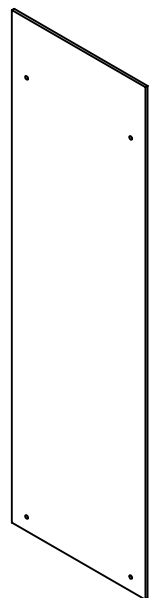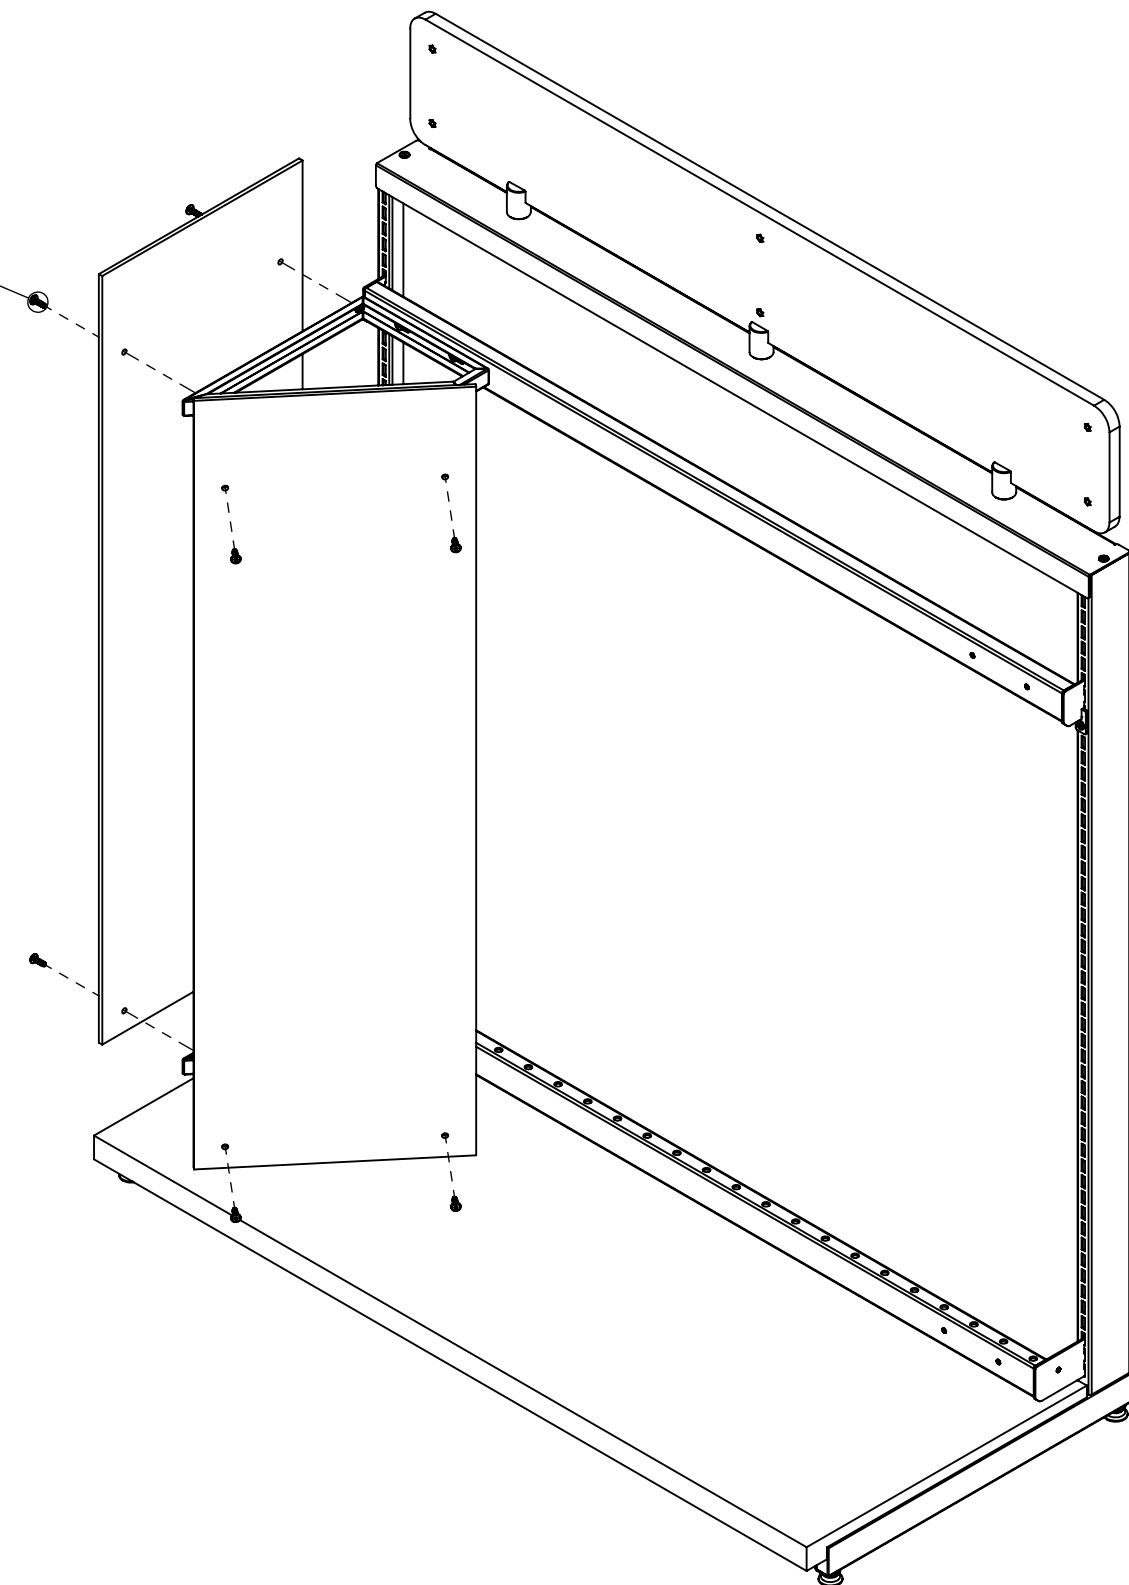


SIDE GRAPHIC
2x

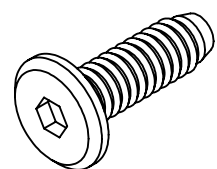


20mmFT DECO
BOLT - BC ZINC
8x

Step 16



NOTE: The graphic frame should be centered on the display.

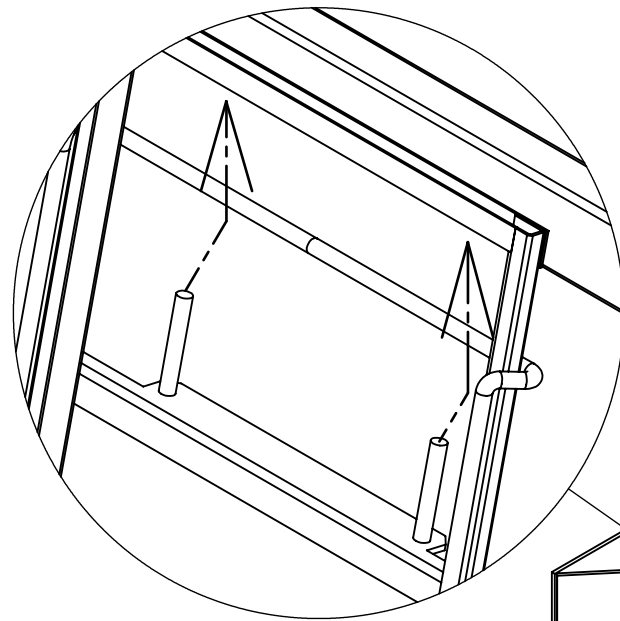

A



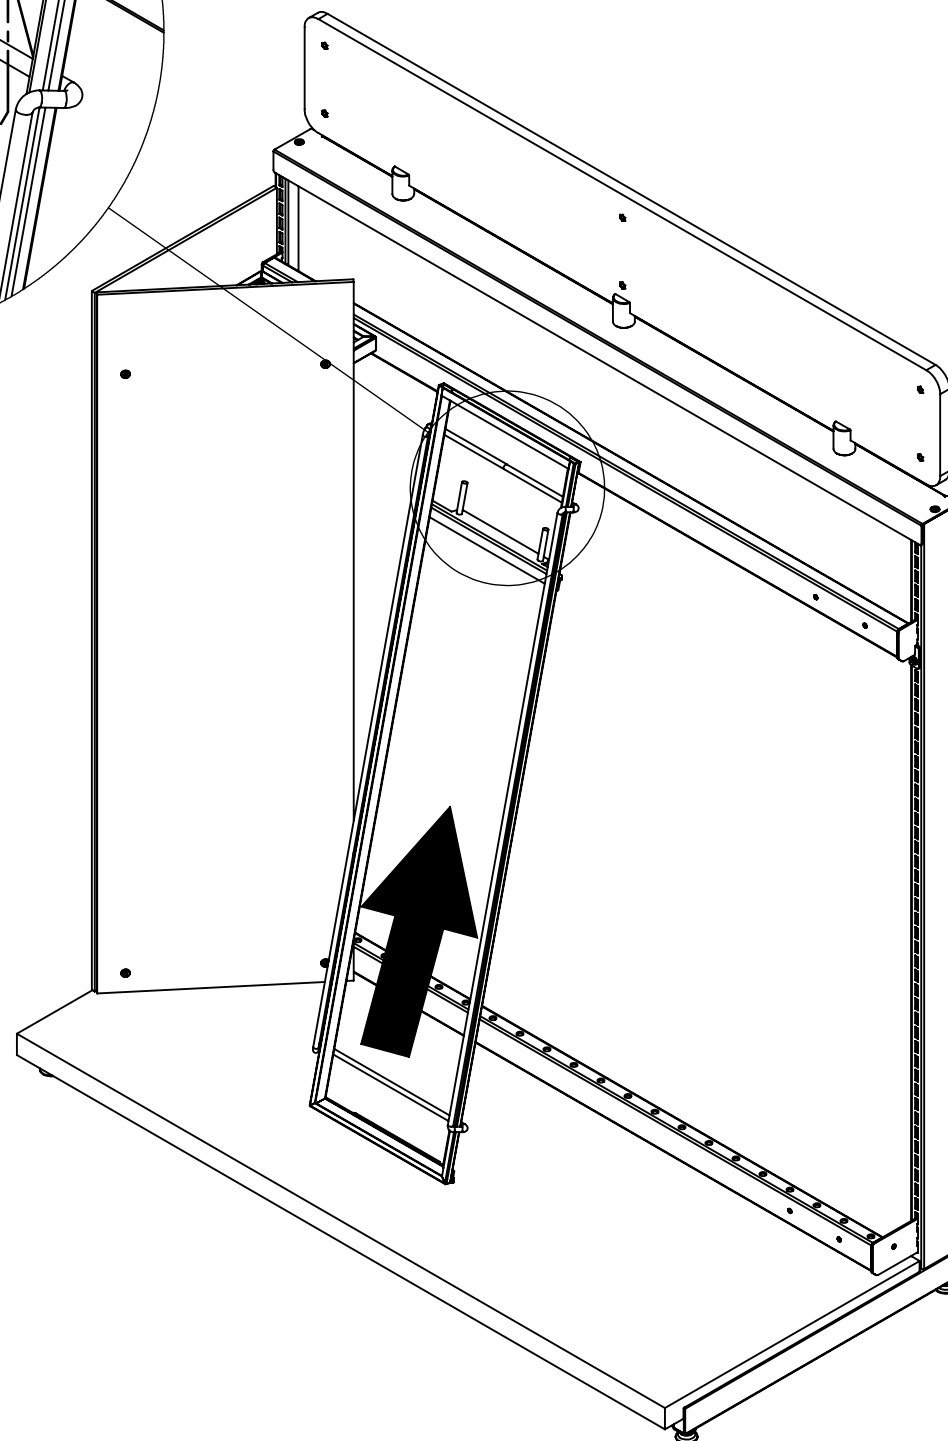


B


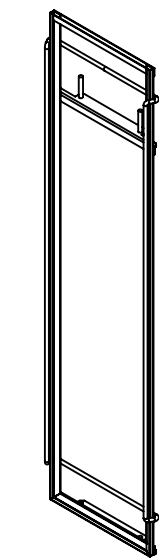
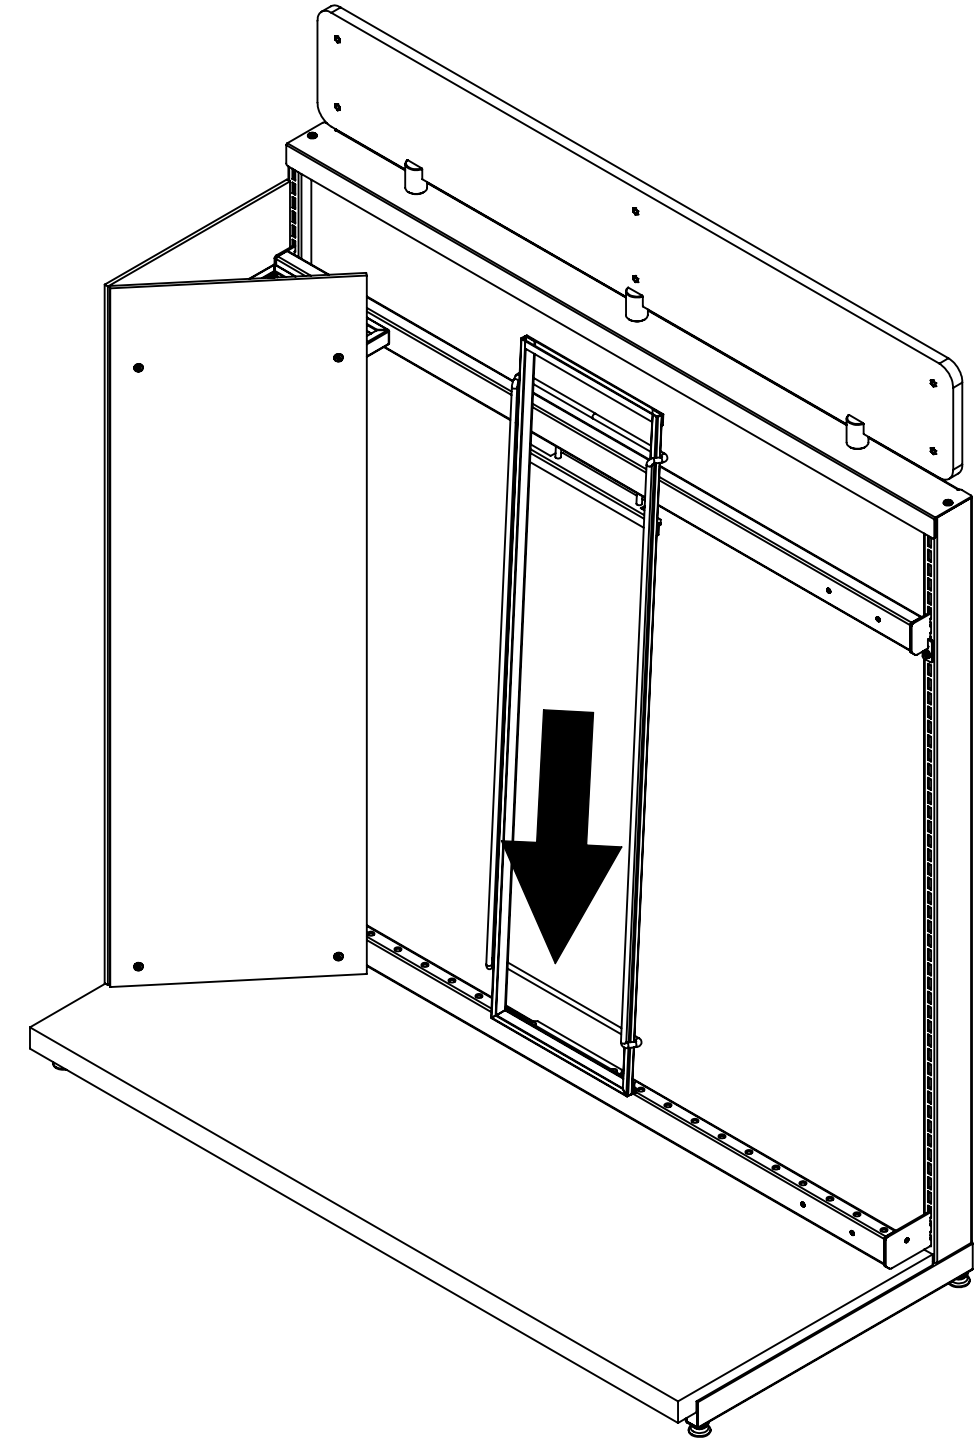


GRAPHIC
FRAME
1x



Step 17

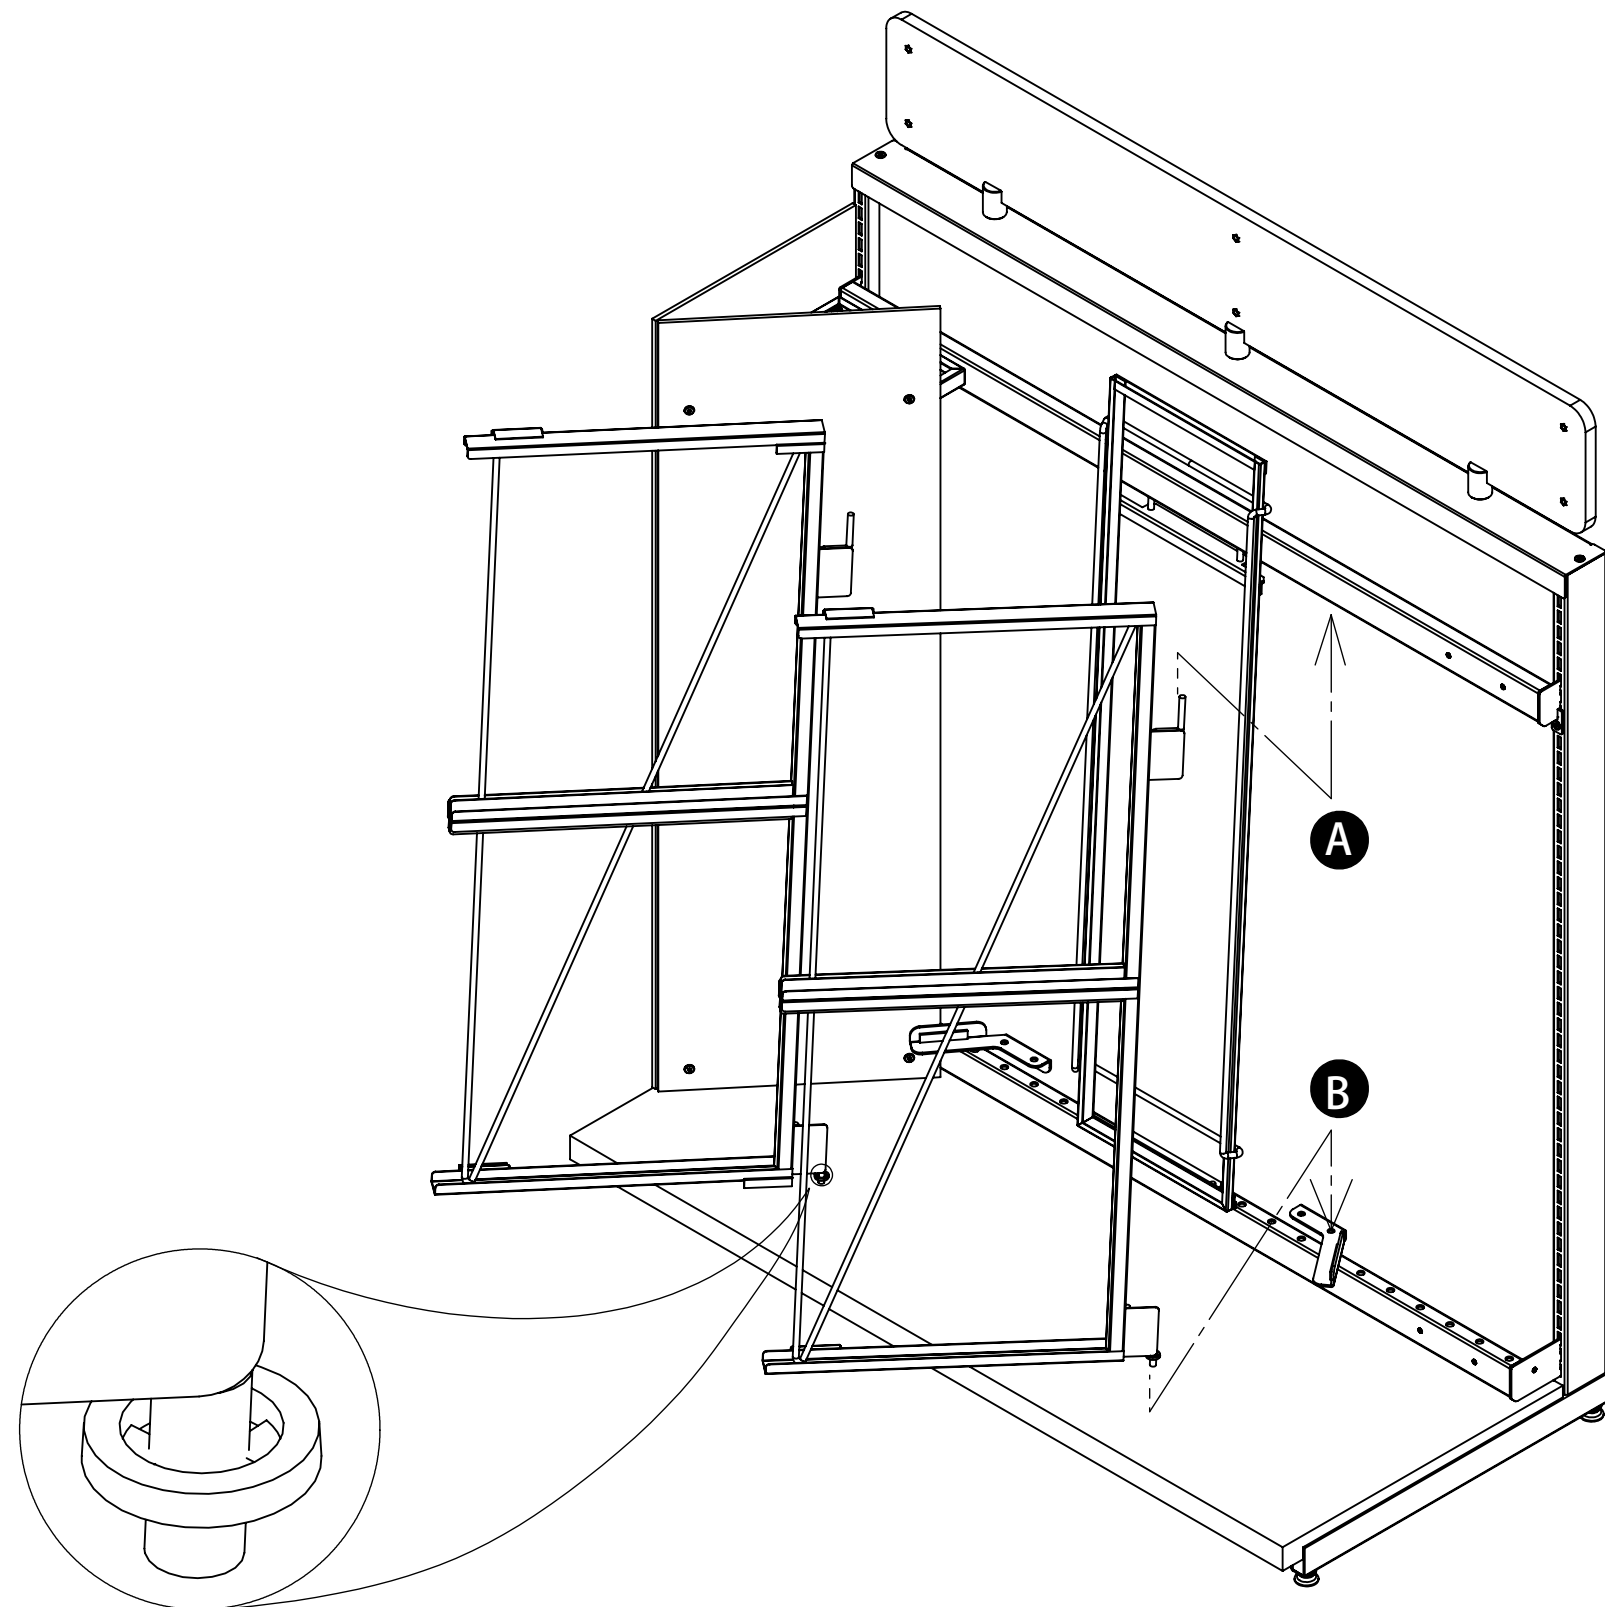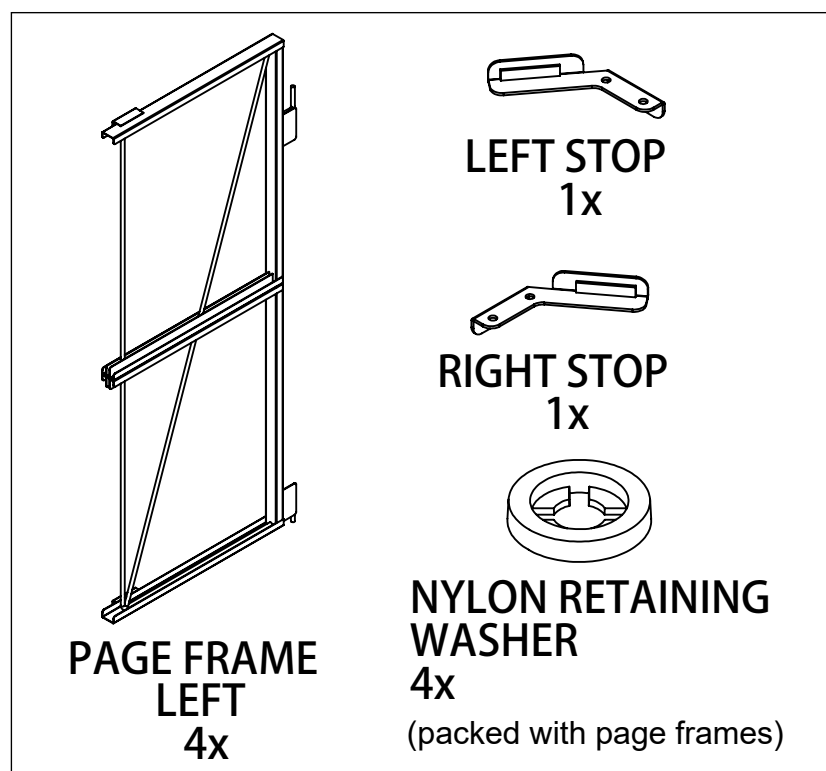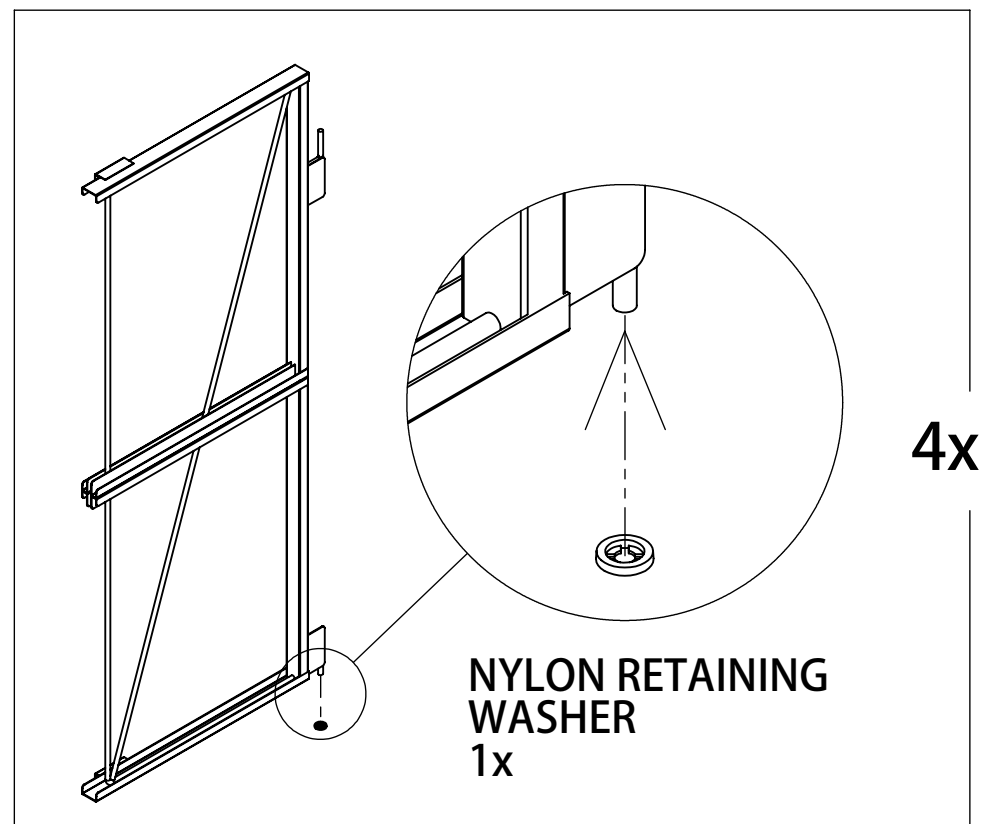

Step 18

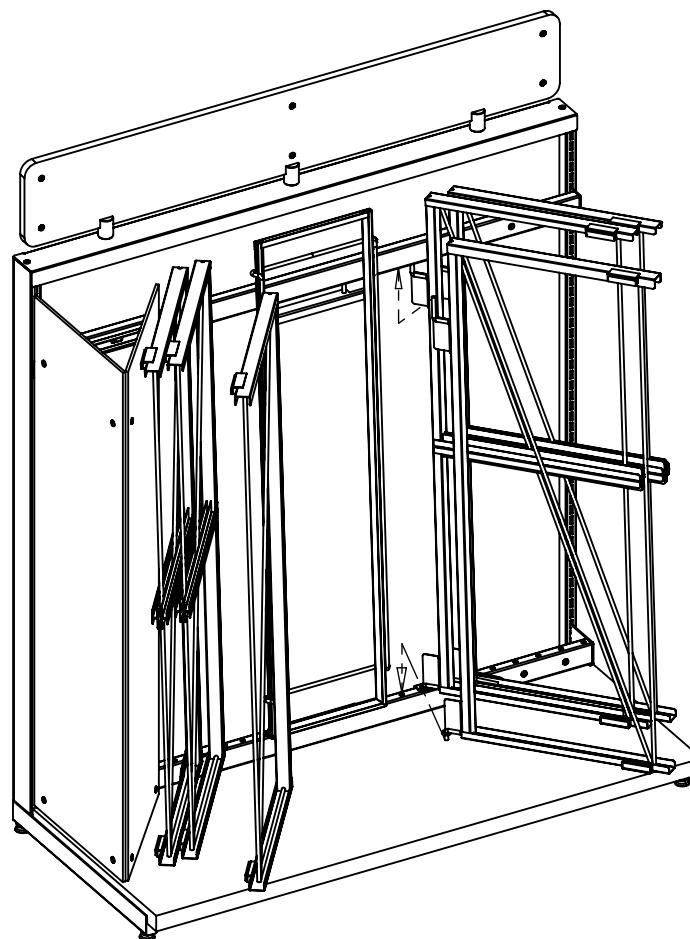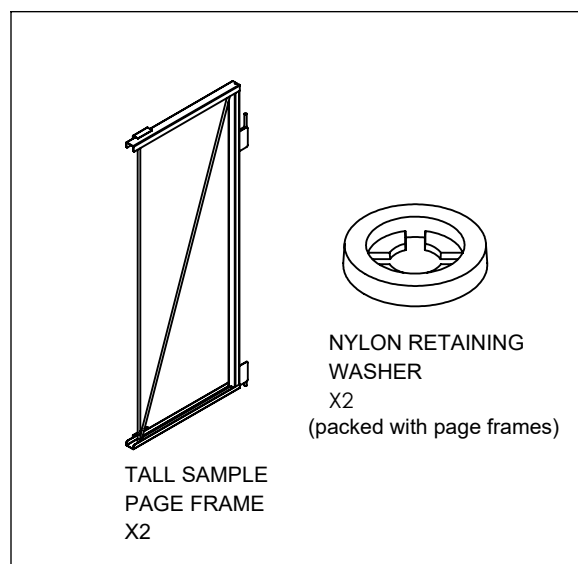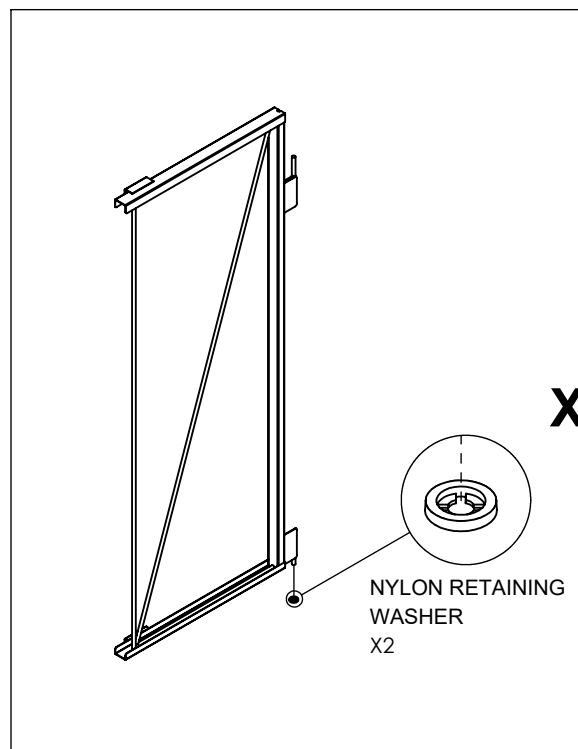

Step 19

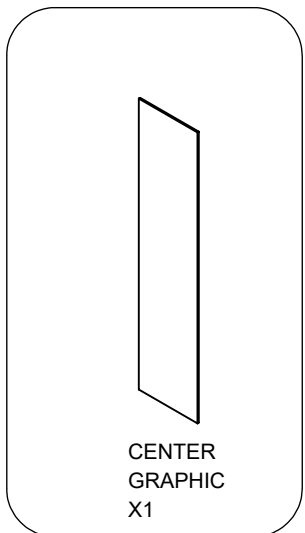
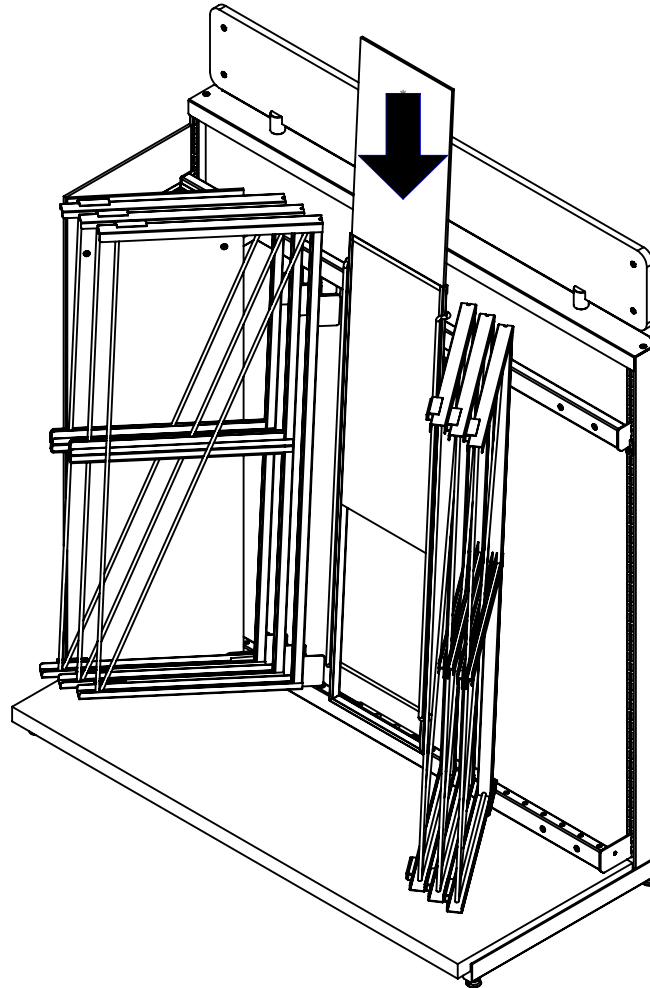


CENTER
GRAPHIC
X1

Step 20

THREADED STUD
X6


PUCK
X6

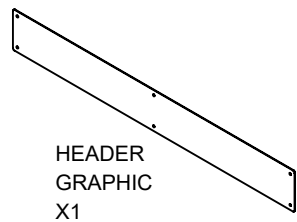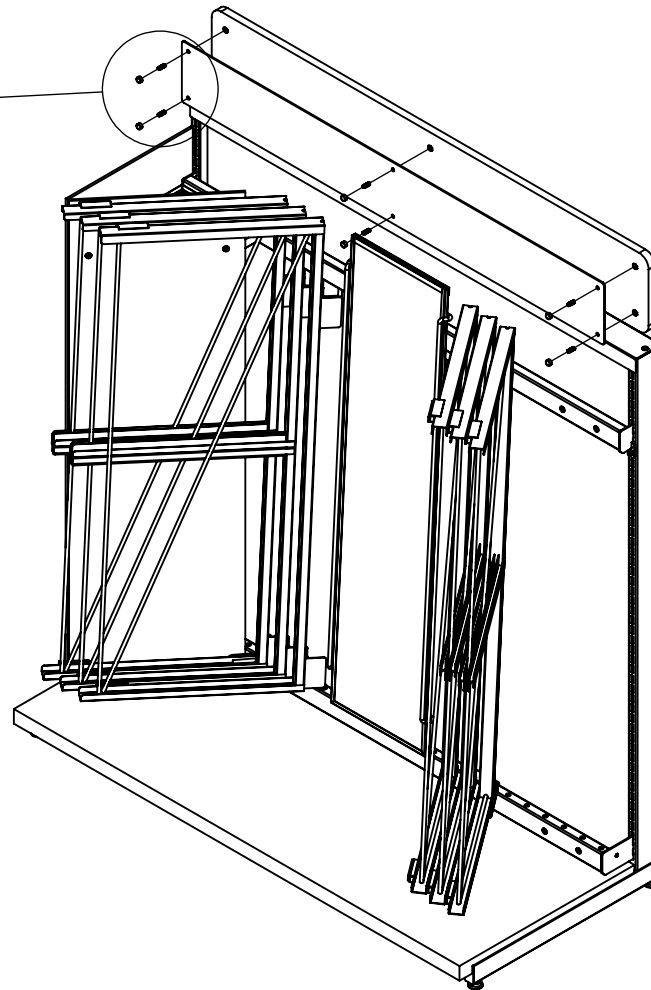

HEADER
GRAPHIC
X1




THREADED
STUD
X6



PUCK
X6

Step 21

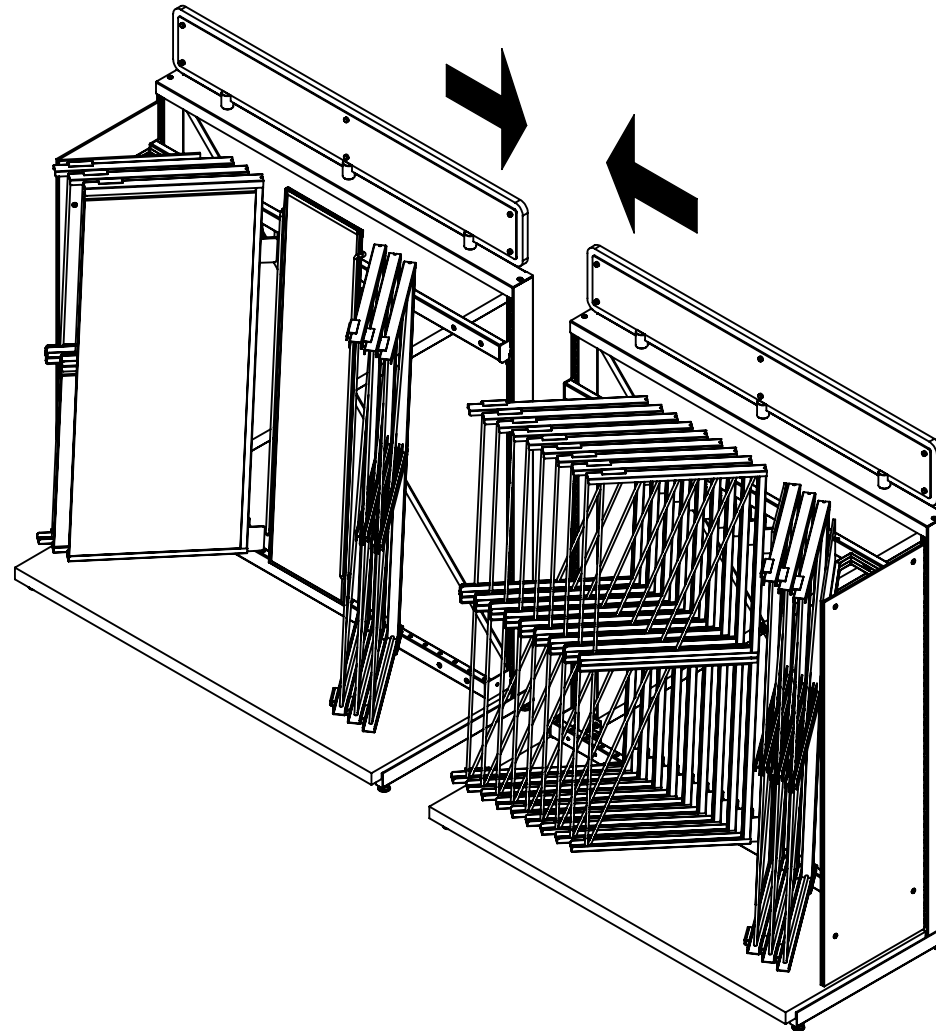

**CONGRATULATIONS YOU HAVE SUCCESSFULLY
ASSEMBLED THE MOHAWK SOLIDTECH DISPLAY**

**NEVER MOVE LOADED DISPLAY
MAKE SURE ALL FASTENERS ARE TIGHTENED**